

MAKE WATER SUPPLY CONNECTIONS


- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" compression. Connect left supply (Marked with a Red Stripe) to Hot and right supply (Marked with Blue Stripe) to Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 21" long from faucet base.
- Note: If additional supply length is required, installer must purchase additional parts separately.
- Important: If SUPPLY HOSES (1, 2) are too long, loop as illustrated to avoid kinking.


CONNECT SPRAY HOSE & INSTALL WEIGHTS

- Remove the FAUCET PROTECTION DEVICE (1) from the HOSE CONNECTOR (2).
- Push the SPRAY HOSE END (3) into the HOSE CONNECTOR (2) until it snaps into place.
- With HAND SPRAY (4) seated in SPOUT (5), install WEIGHT (7) onto HOSE (6) using two SCREWS (8). Locate the WEIGHT (7) 16 inches from the underside of the sink deck. Tighten SCREWS (8) firmly.

4 TEST INSTALLED FAUCET

- Move HANDLE (1) into "off" position.
- Turn on water supplies.
- Check connections for leaks.
 (See Section 5)
- With HANDLE (1) in "off" position, unthread SPRAY (3) from HOSE (2).
- Operate handle back to front, in COLD and HOT positions, to flush water lines thoroughly.
- Replace SPRAY (3) onto HOSE (2).

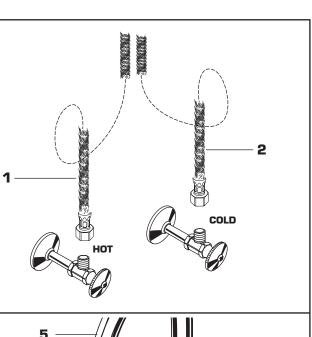

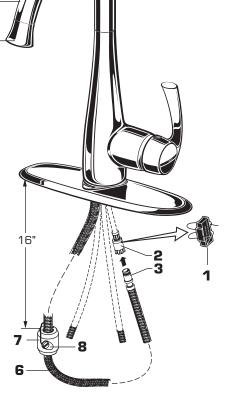



SPRAY OPERATION

With FAUCET on pull down SPRAY **(4).** Check for leaks. Make sure SPRAY **(4)** fully retracks and is seated in the SPOUT HOLDER **(5)**.

