

Technical Bulletin 157 - Hydraulic Separation Required for Rinnai Boilers


Purpose: To announce that hydraulic separation between the boiler and heating system is required for the I-Series and M-Series Condensing Boilers (models shown in tables below).


I-Series Models	M-Series Models	
Combi: i060C, i090C, i120C	Combi: M060C, M090C, M120C, M160C	
Solo: i060S, i090S, i120S, i150S	Solo: M060S, M090S, M120S, M160S	

About Hydraulic Separation: Hydraulic separation uses primary/secondary piping to separate the boiler from the heating system. Primary/secondary piping creates two connected loops: a primary loop for the boiler and a secondary loop for the heating system. The boiler loop is connected to the heating system by closely spaced tees or a low loss header (illustrations on next page). **Important: Additional pump(s) are required when using hydraulic separation.**Directly connecting a boiler to a hydronic heating system (without using hydraulic separation) may cause high pressure losses and low flow conditions within the heating system, thus limiting the performance of the boiler and heating system. Hydraulic separation using primary/secondary piping helps minimize the potential of operational errors while increasing flow and improving system and boiler performance.

NOTE

The images below are not complete piping diagrams; they do not show all valves or piping components. The images are intended to show piping with and without hydraulic separation. Refer to the Boiler Installation and Operation Manual for complete piping diagrams.

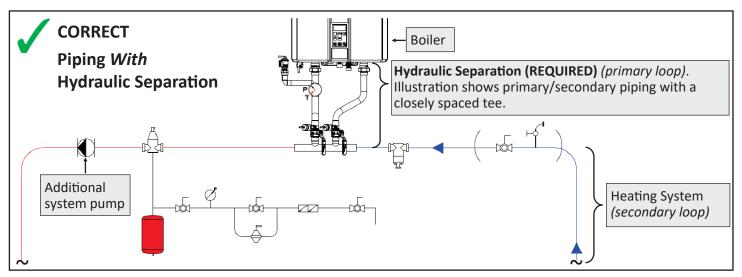

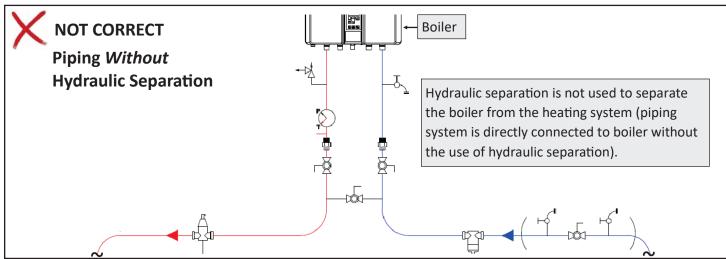


Hydraulic Separator Options




Primary-Secondary Heating Kit

Designed specifically for Rinnai I-Series and M-Series boilers.

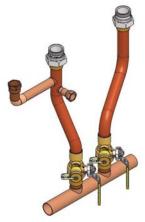


Primary-Secondary Heating Kit Description	Part #	
I-Series Boiler (Combi Models)	807000212	
I-Series Boiler (Heat-Only Models)	807000213	
M-Series Boiler (Combi and Heat-Only Models)	803000023	

Low Loss Header (Field-Supplied)

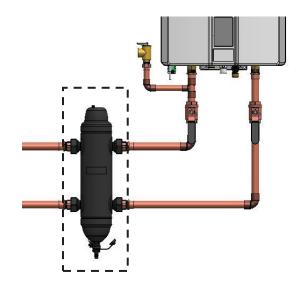

Closely Spaced Tee (Field-Supplied)

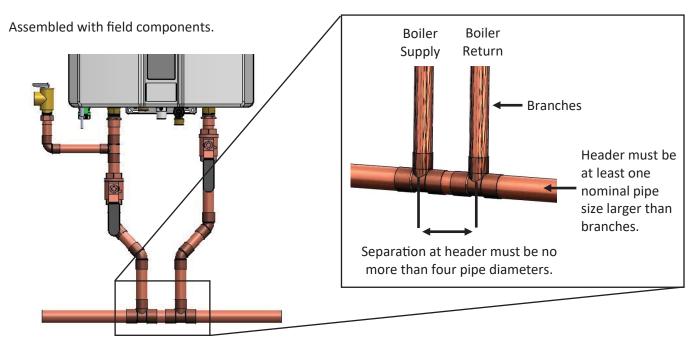

Above illustrations are examples only

Rinnai America Corporation • 103 International Drive, Peachtree City, GA 30269 Toll-Free: 1-800-621-9419 • Phone: 678-829-1700 • www.rinnai.us

©2019 Rinnai America Corporation. Rinnai America Corporation continually updates materials, and as such, content is subject to change without notice. Local, state, provincial, federal and national fuel gas codes must be adhered to prior to and upon installation.

2

TB-157