

Duravit AG
P.O. Box 240
Werderstr. 36
78132 Hornberg
Germany
Phone +49 78 33 70 0
Fax +49 78 33 70 289
info@duravit.com
www.duravit.com

杜拉维特（中国）洁具有限公司
客服电话 400 752 1278
周一至周五 9:00-12:00; 13:00-17:00
info@cn.duravit.com
www.duravit.cn
www.sensowash.cn

Leben im Bad
Living bathrooms



SensoWash® Slim


操作说明

智能马桶盖

Operating instructions

Shower toilet unit

Best.-Nr. 57001/15.05.1 · We reserve the right to make technical improvements and enhance the appearance of the products shown.

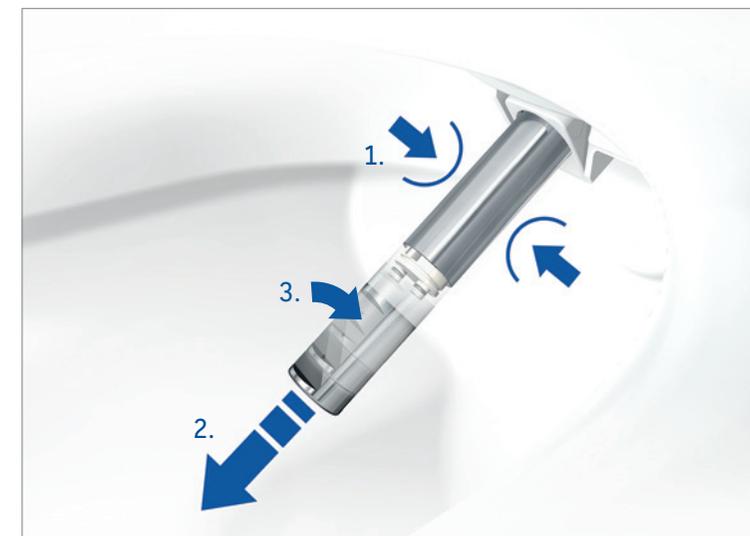



1. 目录

1.	概览	4
1.1	坐便器本体	4
1.2	遥控器	4
2.	符号说明	4
3.	保证您的安全	5
3.1	正常使用	5
3.2	安全说明	5
4.	操作基础知识	7
4.1	遥控器	7
4.2	LED 状态指示灯	8
5.	初始操作	8
	遥控器	8
	电源	8
	开启 SensoWash®	8
6.	操作	9
6.1	开启/关闭 SensoWash®	9
6.2	清洗功能	9
	激活/停用“臀位清洗”	9
	激活/停用“女士清洗”	10
	激活/停用“舒适清洗”	10
	调节喷水强度	11
	调节喷头位置	11
	调节水温	12
6.3	设置	12
	调节夜灯设置	12
	激活/停用确认音	13
	锁定/解锁遥控器	13
7.	清洁和维护	14
7.1	座圈和盖板	14
7.2	喷头和喷嘴	15
	手动清洁喷头和喷嘴	15
	喷头和喷嘴的自洁功能	15
7.3	遥控器	16
8.	废弃物处理	16
9.	故障解答	16
10.	技术参数	20

1. 概览

1.1 坐便器本体

- A** 电源
- B** LED 状态指示灯
- C** 臀位清洗
- D** 环境光感应器
- E** 女士清洗
- F** 红外接收器
- G** 夜灯
- H** 缓冲盖板机制

1.2 遥控器

- 1** 红外发射器
- 2** 臀位清洗
- 3** 女士清洗
- 4** 舒适清洗
- 5** 喷头位置
- 6** 水温
- 7** 停止
- 8** 电池盒

2. 符号说明



警告

表示如不可避免可能会导致死亡或严重伤害的危险情况。



注意

表示如不可避免可能会导致轻微或中度伤害的危险情况。

公告

用于表示与身体伤害无关的操作实践。



此处有小提示。



此处要求您进行操作。



声音信号。



自动定时功能。

3. 保证您的安全

为确保您能尽情享受 **SensoWash®**，请仔细阅读本操作说明，特别是安全说明。请妥善保管本操作说明书，如产品需转交给他人使用时，请附带本说明书。所有操作说明在印刷交付时均已根据设备技术状况进行了确认。**Duravit** 保留因进一步发展而作出更改的权利。

3.1 正常使用

SensoWash® Slim 是一款附带臀位清洗和女士清洗清洁功能的清洗坐便器，可随时作为普通坐便器使用。它只能用于封闭空间。任何其他使用方式都将视为不符合正常使用。对于非正常使用，**Duravit** 不承担任何责任。

3.2 安全说明

请仔细阅读并遵守以下安全说明！

用户要求

- 对于儿童、不了解本设备的人员，以及身体、感官、精神等方面存在缺陷的人员，只有经过安全指导后或在其他人员监护下才可使用本设备。
- 确保儿童不会将 **SensoWash®** 当作玩具。



警告

健康伤害！

本产品必须接地。

> 对照安装说明操作。

仅在设备完全正常的情况下使用该设备

- 确保电源线没有损坏。
- 电源线不能被卡住或挤压。
- 请使电源线远离高温表面和锋利边缘。
- 在该设备无法正常工作时请勿使用它。
立即断开电源。关闭截止阀以中断水源。与 help@duravit.com 联系。

避免因使用不当造成的产品故障和损坏。



注意

健康伤害和可能的产品损坏！

- > 该设备的冷水应从主供水管道连接。
- > 请勿连通任何废水、混水、工业水、海水或其他未处理或半处理的水。
- 如果将 **SensoWash®** 从温度较低的位置移到温度较高的位置，可能会出现冷凝湿气。此时请关闭设备数小时。
- 请勿将 **SensoWash®** 安装在可能结霜的室内。室内温度不能低于 4 °C。
- 请勿将明火、蜡烛、烟头或类似物品放在 **SensoWash®** 上。
- 请勿直接将 **SensoWash®** 浸泡在水里或让其接受暴晒。
- 请勿攀爬或站在产品上。
- 请勿在盖板上放置任何重物。
- 请勿故意弄脏、喷洒或堵塞清洗喷头。

ZH

维修工作必须由相关专业人员执行。

- 请勿对 **SensoWash®** 进行改装、处理、加装或修理。
- 维修工作必须由有资质的电工或技术人员执行。
- 错误修理可能造成事故、损坏和运行故障。
- 请勿使用 **Duravit** 未推荐您使用的附件。

电池的使用



注意

健康伤害！

- > 如果电池酸液泄漏，请不要接触皮肤、眼睛和粘膜。
- > 如果不小心接触到酸液，请立即用大量清水冲洗受感染的部位并立即看医生。
- 将电池放在小孩够不到的地方。如果吞咽电池，可能危及生命。如果电池已被吞咽，请立即请求医疗救助。
- 请勿为电池充电，不得利用其它工具重新激活电池，禁止将电池拆卸、投入火中或使其短路。
- 电池电量耗完后，请立即从遥控器中取出。否则液体可能泄露并造成损坏。
- 请勿将新旧电池一起放入遥控器中。
- 在装入电池之前先清洁电池和触点。安装时注意电池的极性要放

置正确。

- 如果遥控器长时间不用，请将电池取出。
- 请勿将电池放在极端条件下：不要接触热源或接受暴晒。否则可能发生泄漏。

4. 操作基础知识


4.1 遥控器

SensoWash® 是通过遥控器操作的。设置也 通过遥控器进行更改。按下遥控器上的相应按键可开启一种功能。该按键会短暂亮起白色背光。

要关闭清洗功能，请按遥控器上的“停止” **7** 按键。

如果遥控器不可用或电池电量用完，也可以利用侧面的控制按键开启或关闭基本功能。

- > 按下“电池盖”锁 **8** 将其打开。
- > 将两节锂电池 (CR2032) 正极 (+) 朝上插入。
- > 关闭“电池盖” **8**。

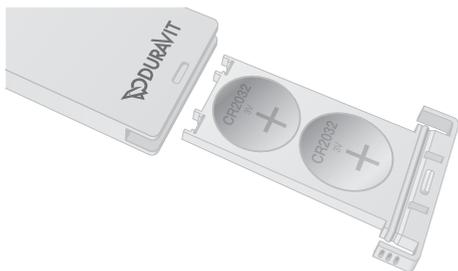

4.2 LED 状态指示灯

- 红色常亮: SensoWash® 处于“待机”模式, 不可使用所有功能。
- 绿色常亮: SensoWash® 处于“开机”模式, 可使用所有功能。
- 绿灯闪烁: SensoWash® 处于“初始化”进程中, 只有坐便盖本体上的“电源”按键 **A** 可以使用。
- 红灯闪烁: 故障。切断主电源, 并参照章节 9 继续操作。

5. 初始操作

遥控器

- > 按下“电池盖”锁 **8** 将其打开。
- > 除去电池仓内的电池隔离片。
- > 关闭“电池盖” **8**。

电源

- > 接通主电源。
- i** SensoWash® 接通电源后将启动大约 15 秒的“初始化”。在此期间, 只有坐便盖本体上的“电源” **A** 按键可用, 所有其他操作均无法执行, “LED 状态指示灯”闪烁绿光。

开启 SensoWash®

- 要求: SensoWash® 处于“待机模式”, “LED 状态指示灯” **B** 处于红色常亮状态。
- > 按下坐便盖本体上的“电源” **D** 按键。
SensoWash® 现在已开机。
“LED 状态指示灯” **B** 处于绿色常亮状态。
所有功能均可使用。

6. 操作

6.1 开启/关闭 SensoWash®

- > 按下坐便盖本体上的“电源” **A** 按键开启 SensoWash®。
LED 状态指示灯显示绿色表示处于“开机模式”。
- > 再次按下坐便盖本体上的“电源” **A** 按键关闭 SensoWash®。
LED 状态指示灯显示红色表示处于“待机模式”。


6.2 清洗功能

- i** 用户使用清洗功能前后，SensoWash® 会自动清洗缩回的喷头。
清洗功能将在您按下“停止”按键 **7** 2 分钟后自动终止。




激活/停用“臀位清洗”
轻柔、安全地冲洗臀位。


ZH

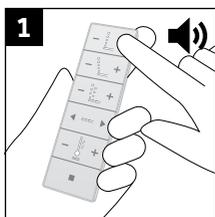

- 1** > 按“加号”键或“减号”键激活“臀位清洗”。

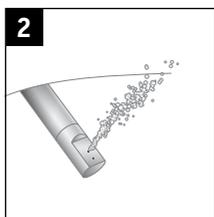

- 2** “臀位清洗”功能已激活。

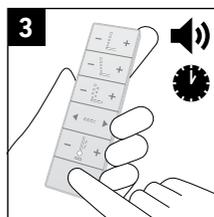


- 3** > 按“停止”按键停止“臀位清洗”或等待 2 分钟后自动停止。

或者按下坐便盖本体上的“臀位清洗”按键 **C** 激活臀位清洗功能。
再次按下坐便盖本体上的“臀位清洗”按键 **C** 停止臀位清洗或等待 2 分钟后自动停止。




激活/停用“女士清洗”


额外的喷头出口可清洗女士私密部位。

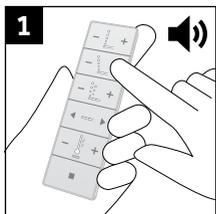

1 > 按“加号”键或“减号”键激活“女士清洗”。

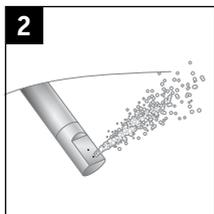

2 “女士清洗”功能已激活。

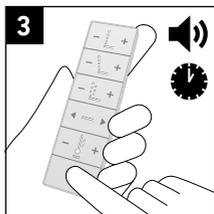

3 > 按“停止”按钮停止“女士清洗”或等待2分钟后自动停止。


或者按下坐便盖本体上的“女士清洗”按键E激活女士清洗功能。再次按下坐便盖本体上的“女士清洗”按键E停止女士清洗或等待2分钟后自动停止。




激活/停用“舒适清洗”

在使用喷头时前后移动喷管。


要求：臀位清洗或女士清洗功能已激活。

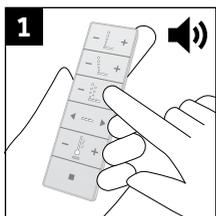

1 > 按“加号”键激活“舒适清洗”功能。

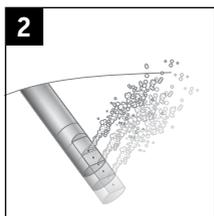

2 “舒适清洗”功能已激活。

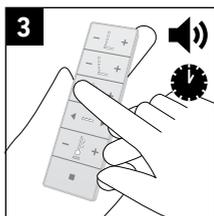

3 > 按“减号”键停止“舒适清洗”功能。之前设置的功能（臀位清洗或女士清洗）仍处于工作状态。2分钟后自动停止。




调节喷水强度

喷水强度有 3 档设置：




低 > 中 > 高

要求：臀位清洗和女士清洗功能已激活且图标处于常亮状态。

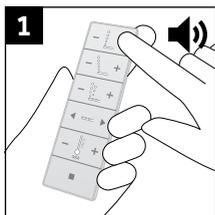

> 按“加号”键调高臀位清洗强度。

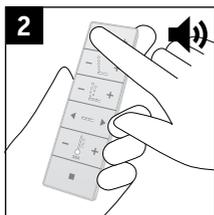

> 按“减号”键调低臀位清洗强度。

i “女士清洗”的操作相同 **3**。

 


调节喷头位置


喷头位置可分别设置在 5 个不同位置：




前



后

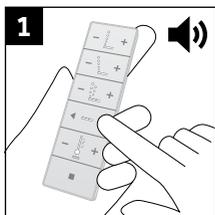

> 按右箭头使喷头向后移。

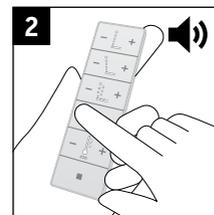

> 按左箭头使喷头向前移。



调节水温

水温调节有 4 档设置：



关

>



低

>




中


>



高

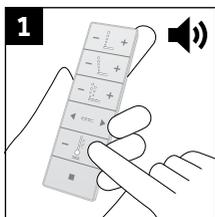

> 按“加号”
键调高水
温。

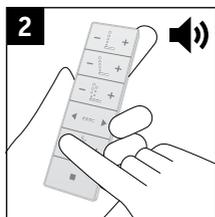

> 按“减号”
键调低水
温。

6.3 设置


调节夜灯设置

在夜晚照亮坐便器陶瓷内表面。


可通过 3 个模式分别设置夜灯：

开 > 自动 > 关

i 按下“停止”和“女士清洗减号”组合按键可循环设置所有夜灯模式：

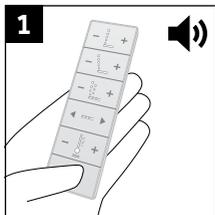

> 按住“停
止”键。

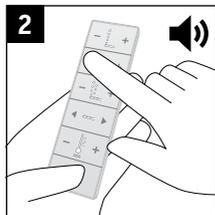


> 按下“女士
清洗减号”
键。

激活/停用确认音


发出任意指令。

开 > 关

- i** 按下“停止”和“女士清洗加号”组合按键可循环设置所有确认音模式：

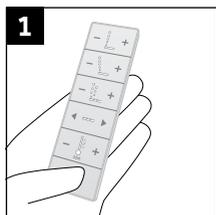

> 按住“停止”键。

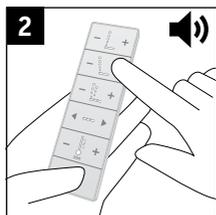


> 按下“女士清洗加号”键。

- i** 短暂确认音： 开
较长确认音： 关


锁定/解锁遥控器

通过遥控器锁定功能。 激活此功能后，所有功能都将无法使用。


- i** 在 5 秒内按下“停止”、“喷头位置 左箭头”、“喷头位置右箭头”、“温度减号”、“温度加号”组合键可锁定遥控器。要解锁遥控器，请按下相同的组合键。

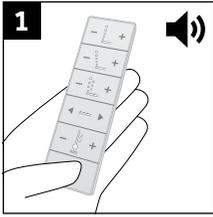


1 > 按住“停止”键。

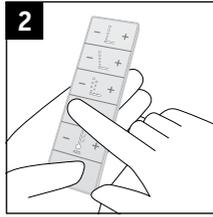


2 > 按下“喷头位置左箭头”键。

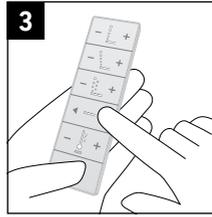

3 > 按下“喷头位置右箭头”键。

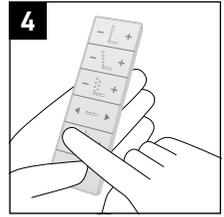

4 > 按下“温度减号”键。

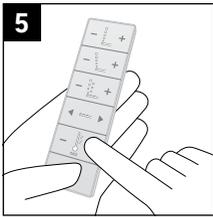

5 > 按下“温度加号”键。

- i 喷头位置和温度图标闪烁三次：锁定
- 喷头位置和温度图标闪烁一次：已解锁

7. 清洁和维护

7.1 座圈和盖板

为方便清洁，座圈和盖板可用单手轻松卸下（参见折页中的图片）。

公告

由于清洁不当导致褪色变黄或喷漆剥离！

- > 请勿使用腐蚀性清洗剂或者含有氯或酸的清洗剂。
 - > 仅使用专用于此应用区域的清洗剂和设备。
 - > 按照清洗剂制造商的说明操作。
 - > 决不能混用清洁剂。
- 中性皂液是理想的日常清洁剂。

定期清洁坐便盖本体，或在沾上污垢后立即清洁。如果不经常进行清洁，污垢可能变得比较明显，从而形成顽固污垢。


- > 用温水和清洗剂清洁坐便器座圈和盖板。
- > 之后轻轻用湿布擦拭。
- > 如果坐便器含有强力清洗剂，请将坐便器座圈打开。

7.2 喷头和喷嘴


手动清洁喷头和喷嘴

定期清洁喷头和喷嘴，或在发现污垢后立即清洁。


如果您想卸下喷头以进行清洁，请查看折页上的图片。

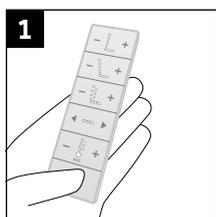


- > 按住“停止”键。

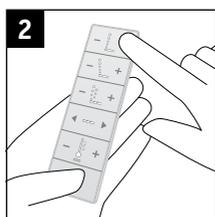

- > 按下“臀位清洗加号”键。

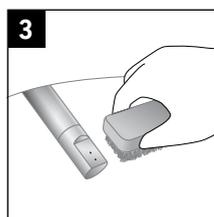


- > 用布、海绵或者刷子和中性清洗剂清洁喷嘴。

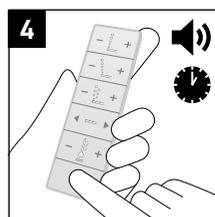


- > 按“停止”按键停止清洗或等待 2 分钟后自动停止。

喷头和喷嘴的自洁功能


喷头和喷嘴可自动进行清洁。

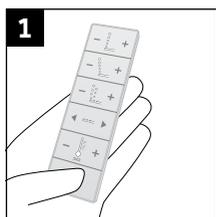

- > 按住“停止”键。

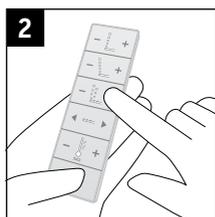

- > 按下“舒适清洗加号”键。

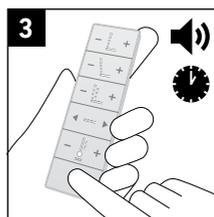

- > 按“停止”按键停止清洗或等待 90 秒后自动停止。

i 喷头和喷嘴在用户使用前后会自动清洁。

7.3 遥控器

> 使用柔软的湿布清洁遥控器和遥控器支架。

8. 废弃物处理



如果带有垃圾桶画叉的标志，则说明这类废弃物需要单独分类到废弃电子电气设备中 (WEEE)。电子电气设备可能包含危险或有害物质。请勿将其作为未分类的生活垃圾丢弃。请将其送至 WEEE 指定的回收点。如此一来，您可以为资源节约和环境保护做出贡献。请与您的零售商或当地相关部门联系，获取更多信息。

用完的电池必须正确进行处理。为此，在出售电池的商店及社区收集站提供了带有相应标签的 电池回收箱。

为避免可能的窒息伤害或危险，请勿让孩子玩塑料袋和产品包装。请妥善保管此类包装材料或以环保的方式将其丢弃。如果可能，请将包装材料一直保留至保修期结束。

9. 故障解答

建议： 出现故障时的初始基本操作

> 在电控箱处切断产品的主电源，至少 3 小时后再重新接通。

如果在按照下面所述的说明操作后 您的设备仍无法正常运转，请与 help@duravit.com 联系。准备好产品编号和序列号。可在操作说明背面铭牌中找到这些内容。

指示灯和报警功能

坐便盖本体上的“LED 状态指示灯” **B** 每 3 秒闪烁一次红光。

故障。

- > 关闭 SensoWash®。
 - > 再次打开 SensoWash®。
- 如果指示灯 仍在闪烁：
- > 切断电 源。
 - > 30 秒后，重新接通。

坐便盖本体上的“LED 状态指示灯” **B** 每 3 秒闪烁三次红光。

故障。

- > 与 help@duravit.com 联系

坐便盖本体上的“LED 状态指示灯” **B** 每 3 秒闪烁四次红光。

故障。

- > 关闭“水 温” **6**。 6.2
- > 激活任意清洗功能。

听到连续确认音。

故障。

- > 切断电源。
- > 30 秒后，重新接通。

基本功能

SensoWash® 不运转。	SensoWash® 未开机。（“LED 状态指示灯” B 不亮）	> 接通主电源。	
	SensoWash® 处于“待机模式”。（“LED 状态指示灯” B 处于红色常亮状态）	> 切换到“开机”模式。	6.1
漏水。	故障。	<ul style="list-style-type: none"> > 关闭水源 主阀门。 > 断开 电源。 > 联系安装工。 	

ZH

遥控器

操作时遥控器上的图标闪烁。（而不是常亮）。	电池电量低。	> 更换电池。	4.1
遥控器不工作。	未装入电池。	> 装入电池。	4.1
	电池电量 用完。	> 更换 电池。	4.1
	电池正负极装反。	> 按正确方式装入电池。	4.1
	遥控器锁定（“喷头位置” 5 和“水温” 6 按钮闪烁三次）。	> 解锁 遥控器。	6.3
	遥控器有缺陷。	> 联系 安装工。	

臀位清洗/女士清洗

在臀位清洗和女士清洗之间切换所需的时间过长。	在臀位清洗和女士清洗之间切换时，喷头需要缩回自洁后再伸出。	这是正常的。	
喷水强度太弱。	喷水强度已设置为“低”。	> 将“喷水强度” 2 和/或 3 调为“中”或“高”。	6.2
	进水软管变形。	> 联系 安装工。	
水温不够高。	水温已设置为“关”或“低”。	> 将“水温”调为 6 “中”或“高”。	6.2
喷头突然停止喷水。	该功能在 2 分钟后自动停止。	这是正常的。	
喷头不出水。	喷嘴堵塞。	> 清洁喷嘴。	7.2

夜灯功能

夜灯不工作。	夜灯已设置为“关”模式。	这是正常的。 > 将夜灯设置为“自动”或“开”模式。	6.3
	夜灯处于“自动”模式，环境光很强。	这是正常的。	
夜灯一直处于打开状态。	夜灯已设置为“开”模式。	这是正常的。 > 将夜灯 设置为“自动”或“关”模式。	6.3
	夜灯处于“自动”模式，环境光很弱。	这是正常的。	
	环境光感应器窗口不干净。	> 清洁“环境光感应器” D 窗口。	

喷头的手动清洁功能

喷头自动缩回。	该功能在 2 分钟后自动停止。	这是正常的。
---------	-----------------	--------

自动自洁

缩回的喷头滴水。	喷头会在清洗前后自动清洁。	这是正常的。
----------	---------------	--------

10. 技术参数

产品编号	611.00 00 2 .. 2300
额定电压	220 - 240 V
频率	50/60 Hz
额定功率	1050 W
待机功率	< 0.5 W
最大电流	6.8 A
温度范围	
• 工作温度	4 - 40 °C
• 水温	32 - 40 °C
进水压力	0.07 - 0.75 MPa (0.7 - 7.5 bar)
清洗水量	0.35 - 0.60 l/min
防护等级	IP X4 全方位防水
质保	通用质保条款和条件请查阅 www.pro.duravit.com/gtc

1. Contents

1. Brief overview	22
1.1 Toilet unit	22
1.2 Remote control	22
2. Description of Symbols	22
3. For your safety	23
3.1 Normal Use	23
3.2 Safety instructions	23
4. Basics of operation	25
4.1 Remote control	25
4.2 Status LEDs	26
5. Initial operation	26
Remote control	26
Power supply	27
Switch SensoWash® on	27
6. Operating	27
6.1 Switching the SensoWash® on / off	27
6.2 Shower functions	27
Activating / deactivating "Rearwash"	28
Activating / deactivating "Ladywash"	28
Activating / deactivating "Comfortwash"	29
Adjusting the water spray intensity	29
Adjusting the spray wand position	30
Adjusting the water temperature	30
6.3 Settings	31
Adjusting the night light	31
Activating / deactivating the confirmation tone	31
Lock / unlock the remote control	32
7. Cleaning and Care	33
7.1 Seat and lid	33
7.2 Spray wand and nozzle	33
Manual cleaning of the spray wand and nozzle	33
Self-cleaning of the spray wand and nozzle	34
7.3 Remote control	34
8. Disposal	35
9. Troubleshooting support	35
10. Technical Data	40

1. Brief overview

1.1 Toilet unit

- A** Power
- B** Status LED
- C** Rearwash
- D** Ambient light sensor
- E** Ladywash
- F** Infrared receiver
- G** Night light
- H** Soft closing mechanism

1.2 Remote control

- 1** Infrared transmitter
- 2** Rearwash
- 3** Ladywash
- 4** Comfortwash
- 5** Spray wand position
- 6** Water temperature
- 7** Stop
- 8** Battery Compartment

2. Description of Symbols

 **WARNING** Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION** Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE Is used to address practices not related to physical injury.

i Hints and tips are provided here.

> This is a prompt requesting your input.

 Acoustic signal.

 Timed automatic function.

3. For your safety

To ensure that you will enjoy your SensoWash®, read these operating instructions carefully, particularly the safety instructions. Keep the operating instructions in a safe place and in the case of a change in ownership, ensure they are given to the new owner. These operating instructions correspond to the device's state of technology at the time of printing. Duravit reserves the right to make changes in terms of further development.

3.1 Normal Use

SensoWash® Slim is a shower toilet seat with spray attachment for rearwash and ladywash cleansing functions. It can be used as a normal toilet at any time. Its use is limited exclusively to enclosed spaces.

Any other usage will be deemed as not corresponding with normal usage. Duravit undertakes no liability for abnormal usage.

3.2 Safety instructions

Read and observe the following safety instructions carefully!

Requirements for the user

- Children and persons with insufficient knowledge or experience in handling the device, or who have limited physical, sensory or mental capabilities, may only use the device following proper instruction or when supervised.
- Make sure that children cannot play with the SensoWash®.



WARNING Health damage!

The product must be grounded.

> Compare with the mounting instructions.

Only use the device when it is fully functional

- Make sure that the power cord is not damaged.
- The power cord must not become jammed or pinched.

- Keep the power cord away from hot surfaces and sharp edges.
- Do NOT use the product if it is not working properly.
Disconnect from the power supply immediately. Close the stop valve to interrupt the water supply. Contact help@duravit.com.

Avoid malfunctions and damage to the product as a result of improper use.



CAUTION

Health damage and potential product damage!

- > Supply the device with cold drinking water from the main water system.
- > Do NOT connect any waste water, grey water, industrial water, sea water or other untreated or semi-treated water.
- If the SensoWash® is moved from a cold location to a warm location, condensation may form. Leave the unit switched off for a few hours.
- Do NOT install the SensoWash® in rooms where there is a danger of frost. The room temperature must not be less than 4°C.
- Do NOT place open fire sources, candles, cigarettes, or similar, on the SensoWash®.
- Do NOT expose the SensoWash® directly to water or sunlight.
- Do NOT climb on or stand on the product.
- Do NOT place any heavy objects on the lid.
- Do NOT deliberately soil, spray or block the spray wand.

Repairs must only be carried out by a person with the necessary expertise.

- Do NOT carry out modifications, tamper with, install additional equipment or attempt to repair the SensoWash®.
- Repairs must be carried out by qualified electricians or technicians.
- Improperly performed repairs can lead to accidents, damage and malfunctions.
- Do NOT use attachments not recommended by Duravit.

Use of batteries

CAUTION Health damage!

- > Avoid contact with skin, eyes and mucous membranes if battery acid has leaked.
- > In case of contact with the acid, flush the affected areas with large amounts of clean water and consult a doctor immediately.

- Keep batteries out of the reach of small children. Batteries can be life-threatening if swallowed. If a battery has been swallowed, call for medical assistance immediately.
- Batteries may not be recharged, reactivated by other means, dismantled, exposed to fire or short-circuited.
- Always remove empty batteries from the remote control immediately. They may leak and cause damage.
- Do not insert new and old batteries together in the remote control.
- Clean the battery and contacts before inserting the battery. Note the proper polarity.
- Remove the batteries if you do not use the remote control for an extended period.
- Do not expose the batteries to extreme conditions: avoid contact with hot surfaces or direct sunlight. Otherwise there is a risk of leakage.

4. Basics of operation

4.1 Remote control


SensoWash® is operated via the remote control. Settings are altered via the remote control as well.

Press the respective button on the remote control to switch on a function. The button lights up white briefly.

To switch off a shower function, press "Stop"  on the remote control.

If the remote control is not available or the batteries are empty, then basic functions can also be switched on or off from the side control buttons.

- > Press the lock of the "Battery Compartment" **8** to open it.
- > Insert two lithium batteries (CR2032) with + facing upwards.
- > Close the "Battery Compartment" **8**.

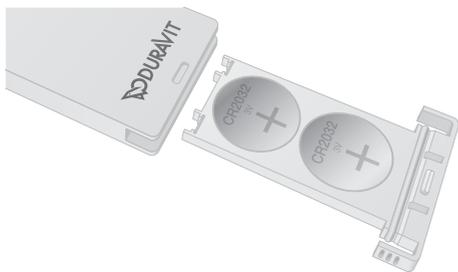

4.2 Status LEDs

Red illuminated: SensoWash® is in the „Standby mode“, all functions cannot be used.

Green illuminated: SensoWash® is in the „On mode“, all functions can be used.

Green flashing: SensoWash® is in the „Initialization“ process, only „Power“ **A** on the seat unit can work.

Red flashing: Malfunction. Disconnect main power supply and proceed with chapter 9.

5. Initial operation

Remote control

- > Press the lock of the "Battery Compartment" **8** to open it.
- > Remove the foil safety tag in the battery compartment.
- > Close the "Battery Compartment" **8**.

Power supply

> Connect the main power supply.

i SensoWash® will start "Initialization" for about 15 seconds when it is connected to the power supply. During this time the "Status LED" **B** flashes green and only "Power" **A** on the seat unit can work, all other operations will not work.

Switch SensoWash® on

Requirement: SensoWash® is in the "Standby mode", the "Status LED" **B** is red illuminated.

> Press "Power" **D** on the seat unit.

SensoWash® is now switched on.

The "Status LED" **B** is green illuminated.

All functions can be used.

6. Operating

6.1 Switching the SensoWash® on / off

> Press "Power" **A** on the seat unit to switch on SensoWash®.
A green Status LED indicates "On mode".

> Press "Power" **A** on the seat unit again to switch off SensoWash®.
A red Status LED indicates "Standby mode".


6.2 Shower functions

i SensoWash® automatically cleans the retracted spray wand before and after washing functions are used. The shower functions terminate automatically after 2 minutes or immediately when "Stop" **7** is pressed.




Activating / deactivating "Rearwash"


Gentle and safe rear cleansing.

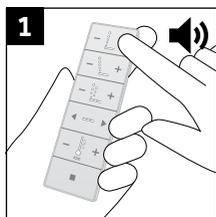

1
> Press Plus or Minus to activate Rearwash.

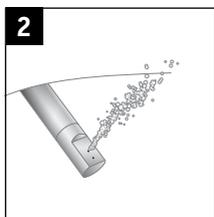

2
Rearwash is active.

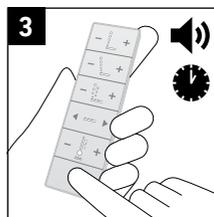


3
> Press Stop to end Rearwash or after 2 min. auto stop.

Alternatively press "Rearwash" **C** on the seat unit to activate Rearwash. Press "Rearwash" **C** on the seat unit again to stop Rearwash or after 2 min. auto stop.




Activating / deactivating "Ladywash"


Additional nozzle outlet for female intimate care.

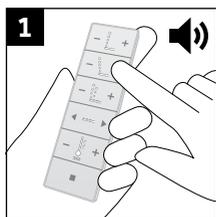

1
> Press Plus or Minus to activate Ladywash.

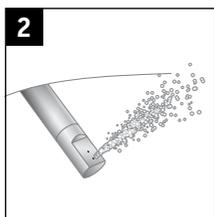

2
Ladywash is active.

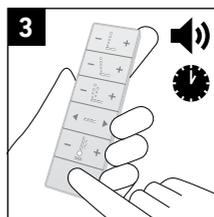

3
> Press Stop to end Ladywash or after 2 min. auto stop.


Alternatively press "Ladywash" **E** on the seat unit to activate Ladywash. Press "Ladywash" **E** on the seat unit again to stop Ladywash or after 2 min. auto stop.




Activating / deactivating "Comfortwash"

Forward and backward movement of spray wand during use of shower.


Requirement: Rearwash or Ladywash function is activated.

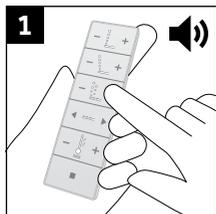

> Press Plus to activate Comfortwash.

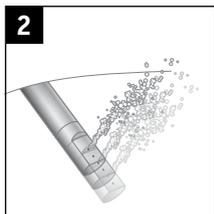

Comfortwash is active.

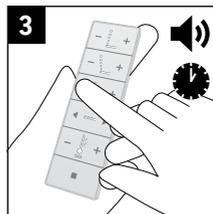

> Press Minus to stop Comfortwash. The function (Rear- or Ladywash) that was previously set is still active. After 2 min. auto stop.




Adjusting the water spray intensity

The water spray intensity can be set individually in 3 steps:




Low > Medium > High

Requirement: Rearwash or Ladywash function is activated and the icon illuminated.

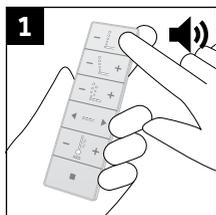

> Press Plus to increase the Rearwash intensity.

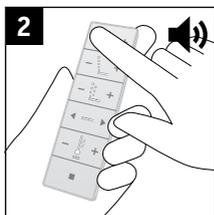

> Press Minus to decrease the Rearwash intensity.

i Same action for “Ladywash” **3**.



Adjusting the spray wand position


The spray wand position can be set individually to 5 different positions:




Front



Rear

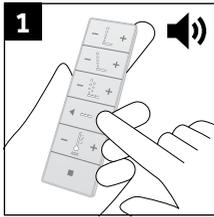

1
> Press Right arrow to retract the spray wand.

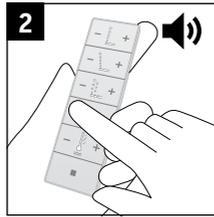

2
> Press Left arrow to extract the spray wand.




Adjusting the water temperature


The water temperature can be individually adjusted in 4 levels:



Off > Low > Medium > High

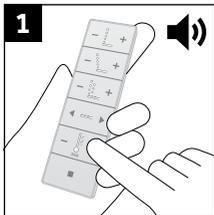

1
> Press Plus to increase the water temperature.

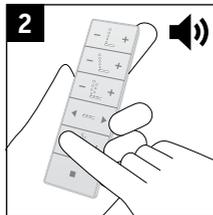

2
> Press Minus to decrease the water temperature.

6.3 Settings


Adjusting the night light

Illuminated inner bowl for night mode orientation.


The night light can be set individually in 3 modes:

On > Auto > Off

- i Press button combination Stop and Ladywash Minus to cycle through the night light settings:

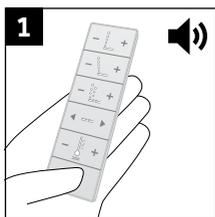

> Press and hold Stop.

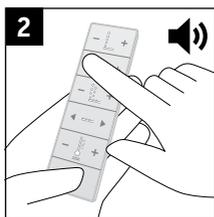


> Press Ladywash Minus.

Activating / deactivating the confirmation tone


To indicate any command.

On > Off

- i Press button combination Stop and Ladywash Plus to cycle through the confirmation tone settings:

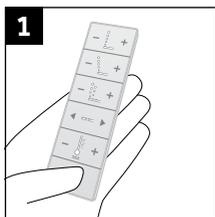

> Press and hold Stop.

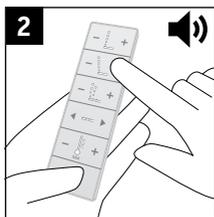


> Press Ladywash Plus.

- i Short confirmation tone: On
Longer confirmation tone: Off


Lock / unlock the remote control

Blocking function via remote control. No function can be used while this function is activated.


- i Press within 5 sec. the button combination Stop, Spray wand position Left arrow, Spray wand position Right arrow, Temperature Minus, Temperature Plus to lock the remote control.
To unlock the remote control use the same button combination.

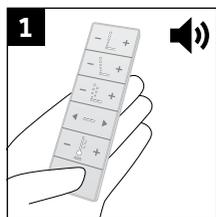


> Press and hold Stop.

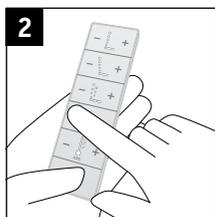


> Press Spray wand position Left arrow.

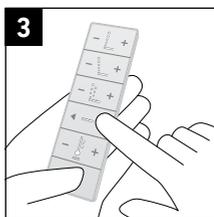

> Press Spray wand position Right arrow.

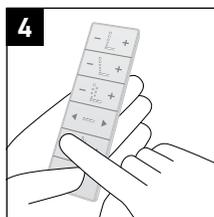

> Press Temperature Minus.

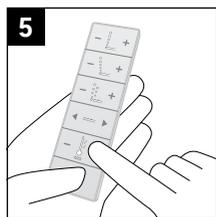

> Press Temperature Plus.

- i Spray wand position and Temperature icons flash three times: Locked
Spray wand position and Temperature icons flash one time: Unlocked

7. Cleaning and Care

7.1 Seat and lid

For cleaning purpose seat and lid can be easily removed one-handed (see picture on foldout page).

NOTICE

Yellow discolouration or paint delamination due to incorrect cleaner!

- > Do not use abrasive cleaning agents or cleaning agents containing chlorine or acid.
- > Only use cleaning agents and equipment which is intended for this area of application.
- > Follow the instructions of the cleaning agent manufacturer.
- > Never mix cleaners.

A mild soap solution is suitable for daily cleaning.

Clean the seat unit regularly, or immediately if it is soiled. If the cleaning is not carried out regularly enough, soiling may become visible which can lead to stubborn dirt.


- > Clean the toilet seat and lid with warm water and a cleaning agent.
- > Wipe slightly damp afterwards.
- > Leave the toilet seat up while the toilet contains powerful cleaning agent.

7.2 Spray wand and nozzle


Manual cleaning of the spray wand and nozzle

Clean the spray wand and nozzle regularly, or immediately if they are soiled.


See picture on fold out page if you want to detach the spray nozzle for cleaning.

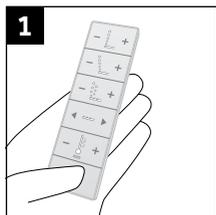


1 > Press and hold Stop.

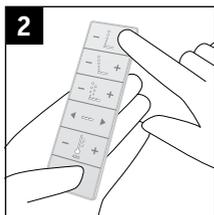

2 > Press Rear-wash Plus.

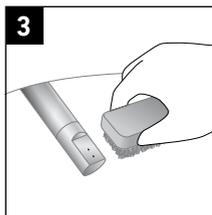


3 > Clean the nozzle with a cloth, sponge or brush and mild cleaning agent.

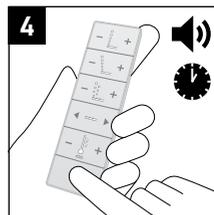


4 > Press Stop to end the cleaning or after 2 min. auto stop.

Self-cleaning of the spray wand and nozzle


Spray wand and nozzle are cleaned automatically.

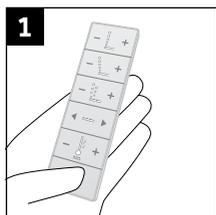

1 > Press and hold Stop.

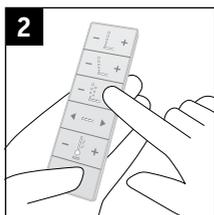

2 > Press Comfortwash Plus.

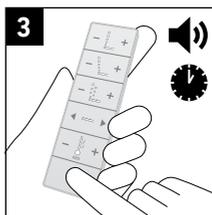

3 > Press stop to end cleaning or after 90 sec. auto stop.

i Spray wand and nozzle are cleaned automatically before and after each use.

7.3 Remote control

> Clean the remote control and wall holder with a soft, damp cloth.

8. Disposal



The crossed-out wheeled bin logo requires the separate collection of waste electric and electronic equipment (WEEE). Electric and electronic equipment may contain dangerous and hazardous substances. Do not dispose of this appliance as unsorted municipal waste. Return it to a designated collection point for the recycling of WEEE. By doing so, you will help to conserve resources and protect the environment. Contact your retailer or local authorities for more information.

Used batteries must be disposed of properly. For this purpose, appropriately labelled containers for disposal of batteries are provided in shops where batteries are sold and at community collection points.

Children must not play with plastic bags and packaging material, due to possible injury or danger of suffocation. Store such material safely or dispose of it in an environmentally-friendly manner. If possible, keep the packaging until the warranty period expires.

9. Troubleshooting support

Recommendation: Initial general action in case of a malfunction
> Disconnect the unit from the mains at the fuse box for at least 3 hours and then reconnect it again.

If your unit does still not work properly after following the instructions mentioned below, contact help@duravit.com. Have the article and serial number ready. These can be found on the nameplate on the back of the operating instructions.

Problem	Potential cause	Solution	Ch.
Indicator lamps and alarm function			
The "Status LED" B on the unit flashes red once each 3 seconds.	Malfunction.	<ul style="list-style-type: none"> > Switch off SensoWash®. > Switch on SensoWash® again. If flashing does not stop: <ul style="list-style-type: none"> > Cut off power supply. > After 30 sec. connect it again. 	
The "Status LED" B on the unit flashes red three times each 3 seconds.	Malfunction.	<ul style="list-style-type: none"> > Contact help@duravit.com 	
The "Status LED" B on the unit flashes red four times each 3 seconds.	Malfunction.	<ul style="list-style-type: none"> > Turn off "Water temperature" 6. > Activate any shower function. 	6.2
A continuous confirmation tone is audible.	Malfunction.	<ul style="list-style-type: none"> > Cut off the power supply. > After 30 sec. connect it again. 	

Problem	Potential cause	Solution	Ch.
General function			
SensoWash® is not working.	SensoWash® is not switched on. ("Status LED" B is not illuminated)	> Switch on the main power supply.	
	SensoWash® is in Standby mode. ("Status LED" B is red illuminated)	> Switch to "On mode".	6.1
A water leak exists.	Malfunction.	<ul style="list-style-type: none"> > Close the main valve for the water supply. > Disconnect the power supply. > Call the installer. 	

Remote control

Icons on remote control flash during operation. (instead of being illuminated)	The batteries are low.	> Change the batteries.	4.1
--	------------------------	-------------------------	-----

Problem	Potential cause	Solution	Ch.
The remote control does not work.	No batteries are inserted.	> Insert batteries.	4.1
	The batteries are flat.	> Change the batteries.	4.1
	The battery connections are reversed.	> Insert the batteries the correct way.	4.1
	The remote control is locked ("Spray wand position" 5 and "Water temperature" 6 flash three times).	> Unlock the remote control.	6.3
	The remote control is defective.	> Contact your installer.	

Rearwash / Ladywash

Switching between the Rearwash and Ladywash takes too long.	When switching between Rearwash and Ladywash, the spray wand moves back then forward again after self-cleaning is complete.	This is normal.
---	---	-----------------

Problem	Potential cause	Solution	Ch.
The water spray intensity is too weak.	The water spray intensity has been set to Low.	> Adjust the "Water spray intensity" 2 and/or 3 to Medium or High.	6.2
	The water supply hose has buckled.	> Contact your installer.	
The water temperature is not warm enough.	The water temperature has been set to Off or Low.	> Adjust the "Water temperature" 6 to Medium or High.	6.2
The water spray from the spray wand suddenly stops.	The function automatically stops after 2 minutes.	This is normal.	
A jet of water is not emerging from the spray wand.	The spray nozzle is clogged.	> Clean the spray nozzle.	7.2

Night light function

The night light does not come on.	The night light has been set to Off mode.	This is normal. > Set the night light to Auto or On mode.	6.3
	The night light is in Auto mode and the ambient light is bright.	This is normal.	

Problem	Potential cause	Solution	Ch.
The night light stays on continuously.	The night light has been set to On mode.	This is normal. > Set the night light to Auto or Off mode.	6.3
	The night light is in Auto mode and the ambient light is dim.	This is normal.	
	The ambient light sensor window is not clean.	> Clean the "Ambient light sensor" D window.	

Manual cleaning function of the spray wand

The spray wand retracts automatically.	The function automatically stops after 2 minutes.	This is normal.
--	---	-----------------

Automatic self-cleaning

Water is dripping out of the retracted spray wand.	The spray wand is cleaned automatically before and after washing.	This is normal.
--	---	-----------------

10. Technical Data

Article number	611.00 00 2 .. 2300
Rated voltage	220 - 240 V
Frequency	50/60 Hz
Nominal power consumption	1050 W
Standby power consumption	< 0.5 W
Maximum current	6.8 A

Temperature range	
• Operating temperature	4 - 40 °C
• Water temperature	32 - 40 °C
Incoming water pressure	0.07 - 0.75 MPa (0.7 - 7.5 bar)
Water consumption in spray mode	0.35 - 0.60 l/min
Protection degree	IP X4 Protection against water spray from all sides
Warranty	Find our General Terms and Conditions (GTC) at www.pro.duravit.com/gtc