


Speed Connect[®] Drain

Troubleshooting Guide

- If sink does not hold water even though Stopper is in the "down" position: • Follow CABLE ADJUSTMENT PROCEDURE.
- If Stopper does not raise up fully or sink drains too slowly: • Follow CABLE ADJUSTMENT PROCEDURE.
- If you need to remove the Stopper: • Follow STOPPER REMOVAL PROCEDURE
- If you would like the ability to remove your Stopper simply by lifting it out of the drain: • Follow STOPPER INSTALLATION PROCEDURE for "Unlocked" mode.


CABLE ADJUSTMENT PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" in the illustration. Fig. B.
- Use a small screwdriver to rotate the Cam in the clockwise direction as far as it will go. At this point the Stopper should be in the UP position. Fig. B, C.
- Push DOWN on the Lift-Knob to make sure it is fully down. Fig. C.
- Re-attach the Cable to the Drain Body Connection (2) by threading the Cable Connector (1) clockwise onto the Drain Body Connection (2) and hand-tighten. Fig. A.

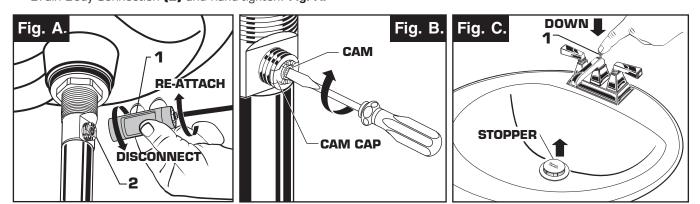

STOPPER REMOVAL PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" and "Cam Cap" in the illustration. Fig. B.
- Use fingers or small screwdriver under either side of the Cam Cap to pry it out from the Drain. Fig. D.
- Remove the Cam by pulling it straight out while wiggling gently to loosen the Rubber Seal. Fig. E.
- The Observed and by paining it set algebras while wiggining genery to loose it.
- The Stopper can now be removed by lifting it out of the Drain. **Fig. F.**

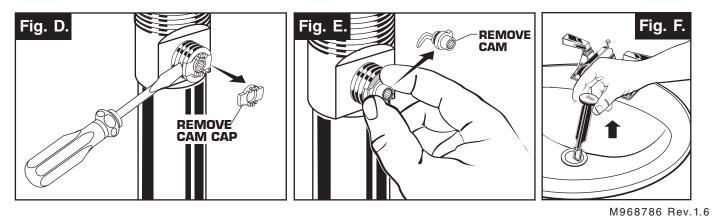

5

ASTIC COVER (* ARD SPACER (2) 3).	-	
B).) from under	
(4) on DRAIN E ODY. Fig. B.	BODY before	6
GASKET (4) dow		
Ig. в.		
ain from 'Ure		
f SINK DY (1) up et.	4	e V
er's putty d		-DI OI
CHMENT ce towards	3	7
		Ę
drain body		\rightarrow
	FOAM GASKET ((3) clock-wise t GASKET (4) dow ig. B. AIN FROM URE f SINK IY (1) up et. er's putty d. HMENT ce towards IK. (ET (3) and drain body and tighten	 1) counter-clockwise and remove FOAM GASKET (2) from drain (3) clock-wise to bottom of GASKET (4) down against ig. B.


STOPPER INSTALLATION PROCEDURE


The Stopper can be installed two ways, "Locked" Mode (Stopper cannot be removed) or "Unlock" Mode (Stopper is removable).


- Locked Mode:
- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. **Fig. G.**
- To install the stopper in "Locked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the rear of the Sink and the American Standard logo is facing front. Rotate Stopper slightly if necessary so that the Stopper slides all the way down.Fig. G.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in Troubling Shooting Guide to complete installation. Stopper will be in "Locked" mode and not be removable.


Unlocked Mode:

- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. **Fig. H.**
- To install the stopper in *"Unlocked"* mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the **front** of the Sink and the American Standard logo is facing **rear**. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. **Fig. H.**
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in "Troublingshooting Guide" to complete installation. Stopper will be in "Unlocked" mode and removable.

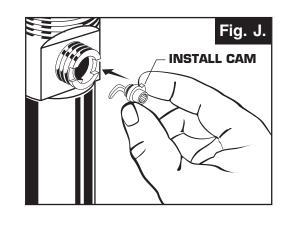

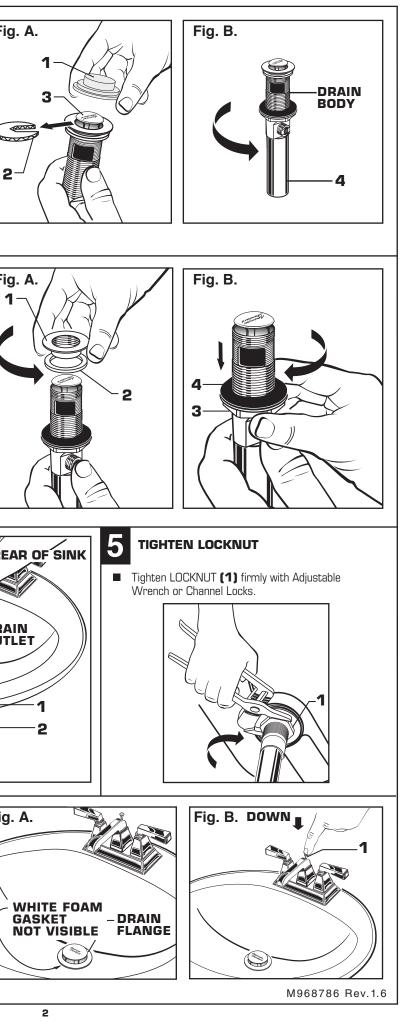

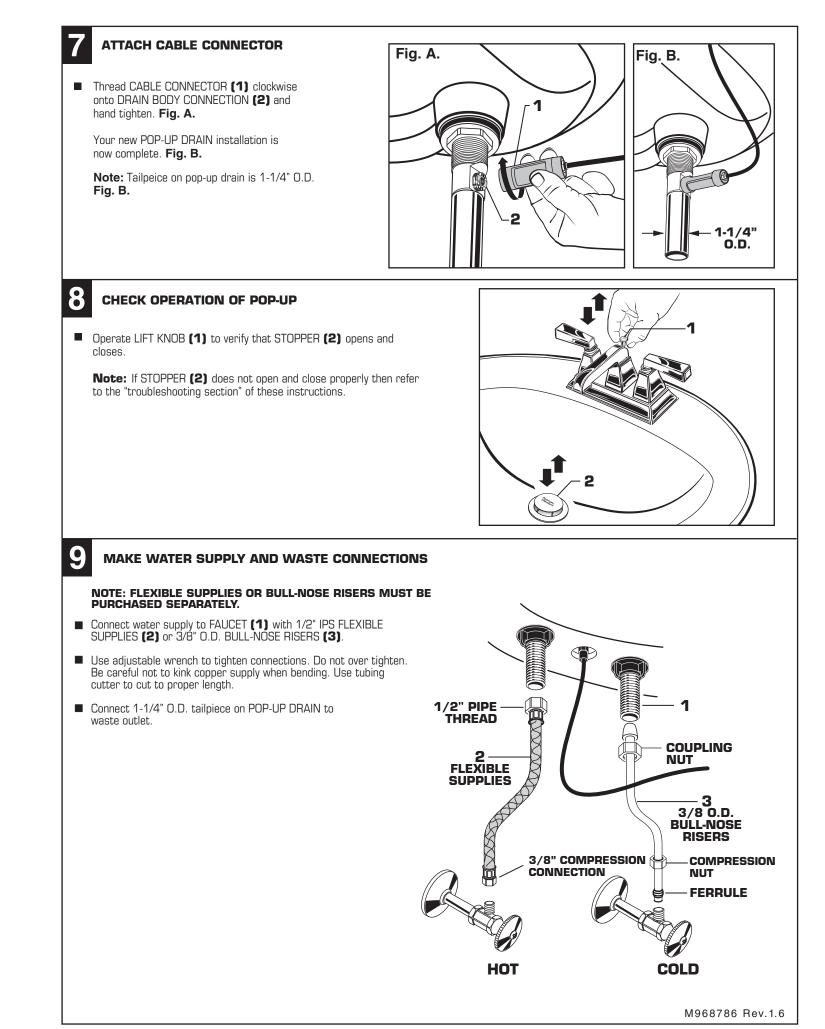


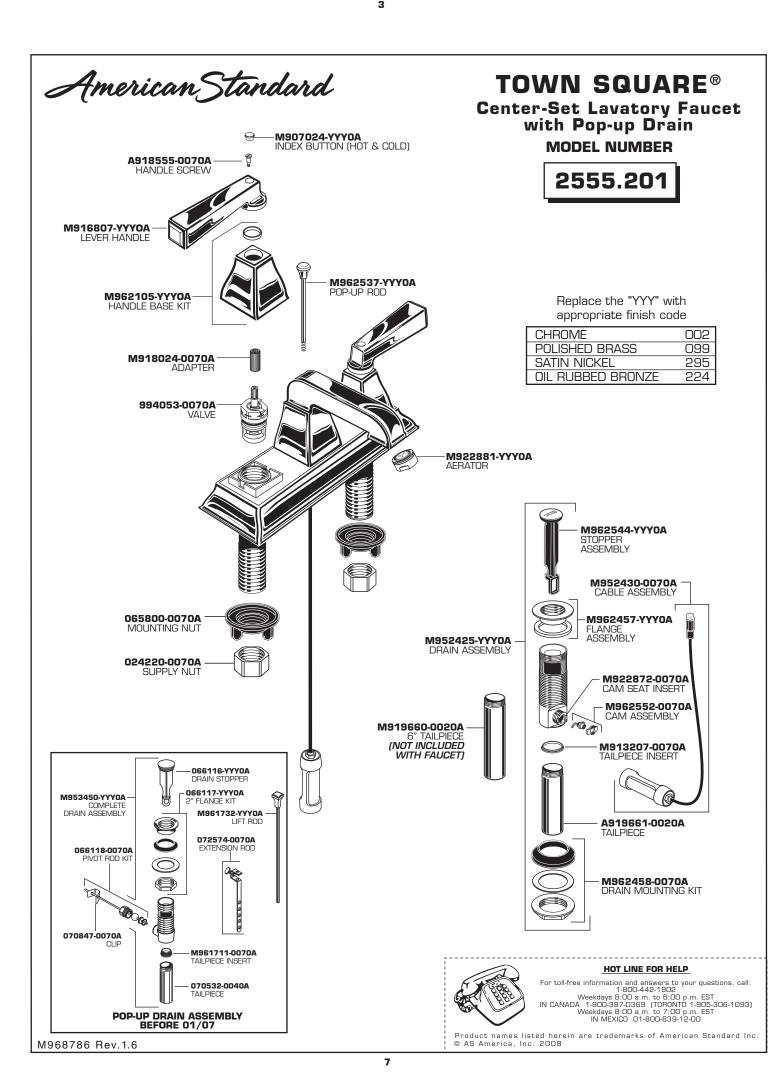

<text>

M968786 Rev.1.6

6

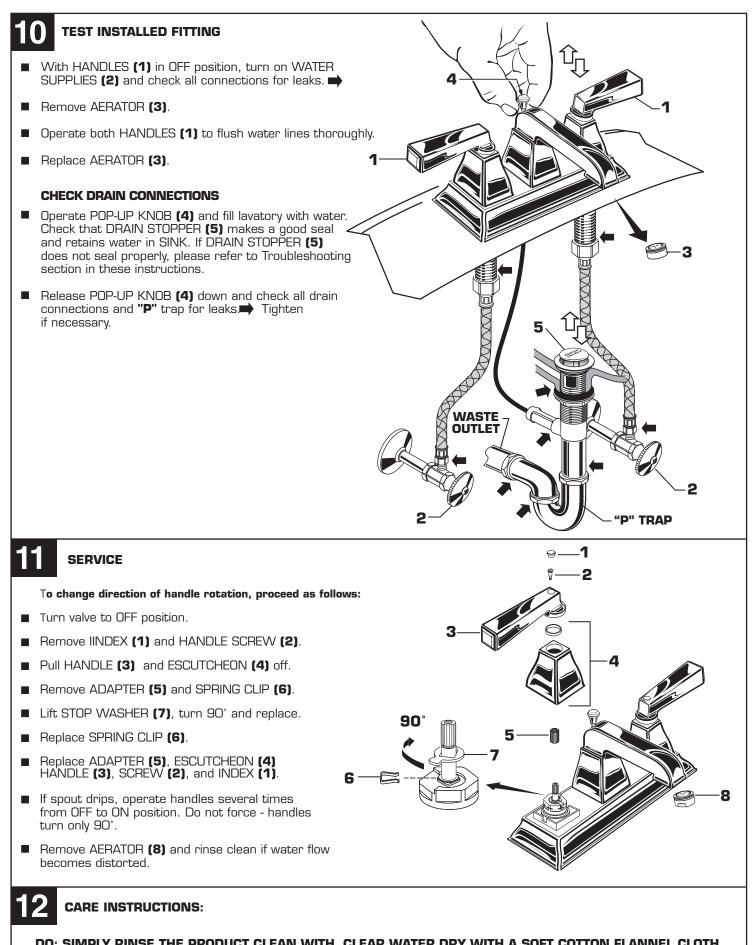

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER.DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

4