


# INSTALLATION INSTRUCTIONS

## Isle™ Single Lever Pull-Down Kitchen Faucet

Model D35409300

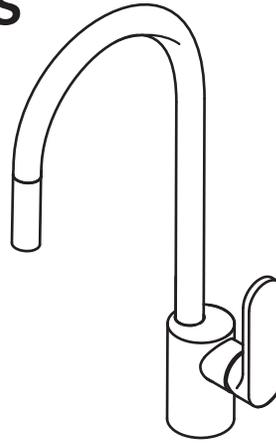

AMERICAN STANDARD

Thank you for selecting DXV by American Standard. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

### RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.



Adjustable Wrench




Channel Locks



Flat Blade Screwdriver

### ROUGHING-IN DIMENSIONS:

- For reference

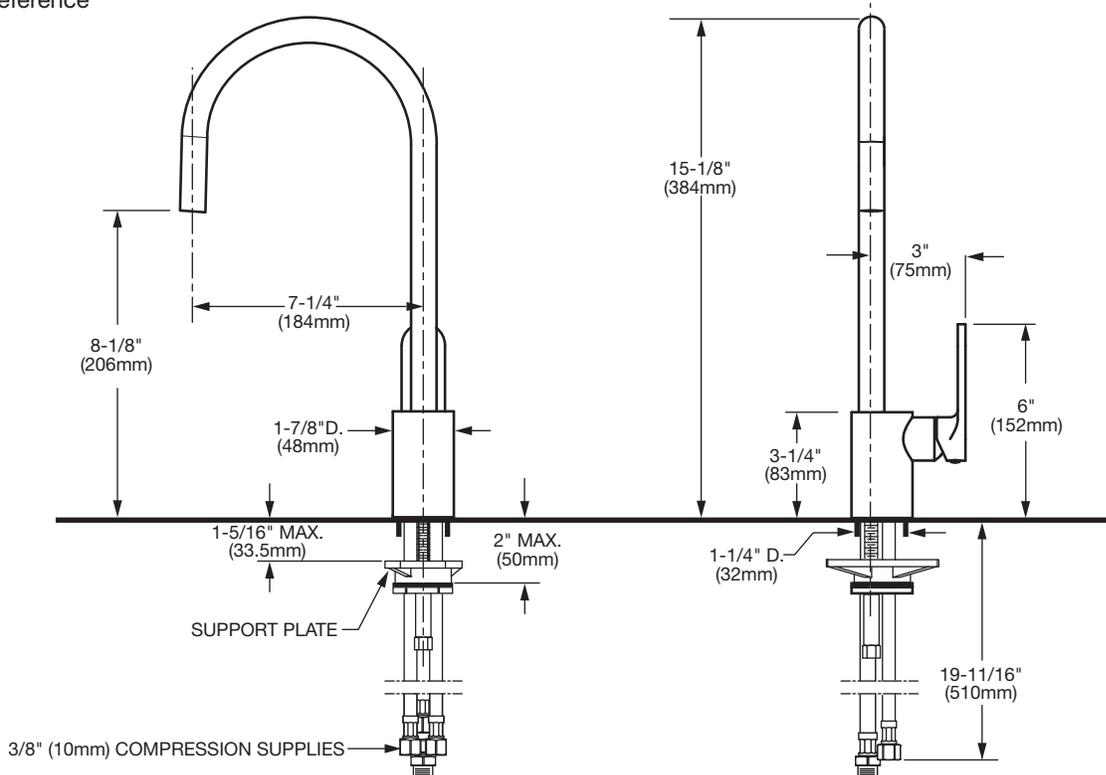

#### In the United States:

DXV by American Standard  
One Centennial Avenue  
Piscataway, New Jersey 08855  
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734  
[www.DXV.com](http://www.DXV.com)

#### In Canada:

DXV by American Standard  
5900 Avebury Road  
Mississauga, Ontario  
L5R 3M3  
Canada

Toll Free: 1-800-387-0369  
Local: 905-306-1093  
Fax: 1-800-395-1498  
[www.DXV.ca](http://www.DXV.ca)

#### In Mexico:

DXV by American Standard  
Via Morelos 330  
Col. Santa Clara Coatitla  
Ecatepec, Estado de México 55540



Toll Free: 01-800-8391200  
[www.DXV.mx](http://www.DXV.mx)

S  
A  
V  
E  
  
F  
O  
R  
  
F  
U  
T  
U  
R  
E  
  
U  
S  
E

## 1 INSTALL FAUCET

**CAUTION** Turn off hot and cold water supplies before beginning.

- Make certain the SEAL (1) is properly seated in recess of faucet body. Insert SUPPLY HOSES (2), SPRAY HOSE (3) and MOUNTING STUD (4) through mounting hole and seat faucet onto sink or mounting surface. Do not use putty. **Fig. A.**
- From below install SUPPORT PLATE (5) GASKET with RETAINING WASHER (6) onto MOUNTING STUD (7). Install MOUNTING NUT (8) onto MOUNTING STUD (7). **Fig. B.**
- Adjust Faucet so that it is centered. Tighten MOUNTING NUT (8) to complete faucet mounting. **Fig. B.**

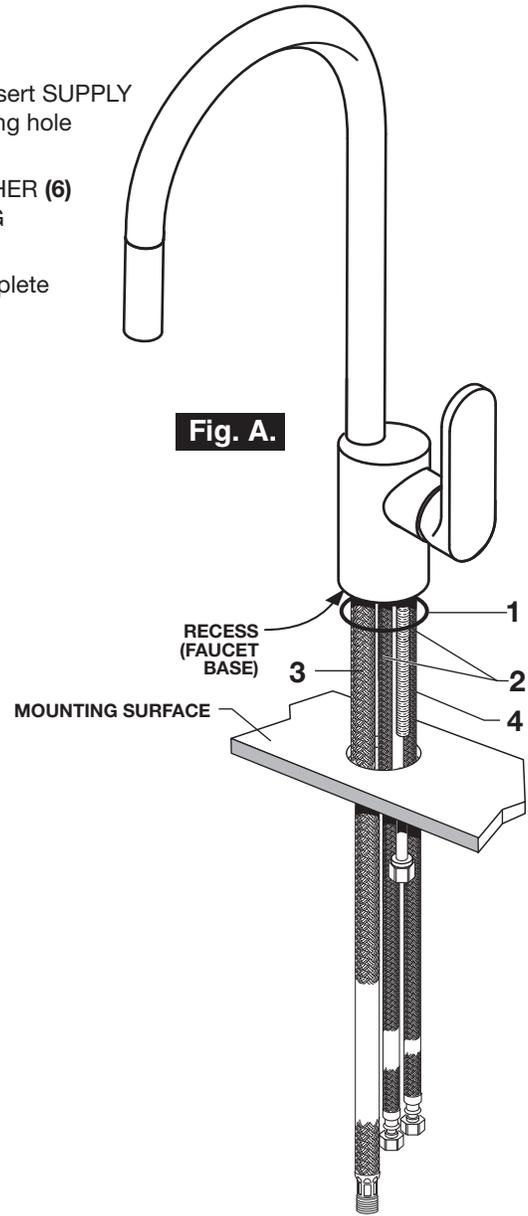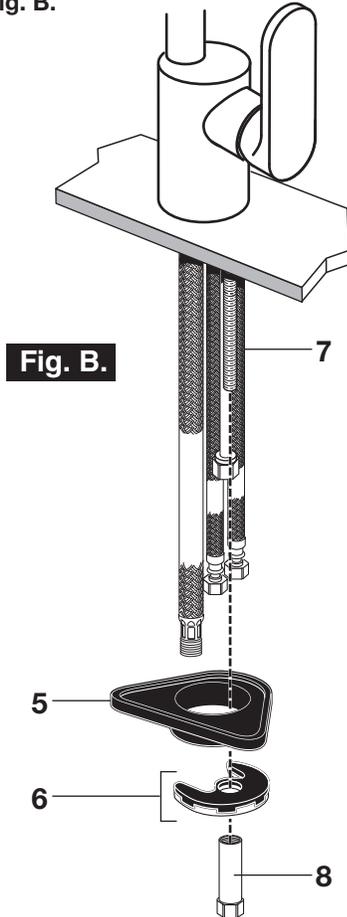


## 2 MAKE WATER SUPPLY CONNECTIONS

- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on tting supplies are 3" (8mm) compression. Connect left SUPPLY (1) to Hot (Marked with a Red Stripe) and right supply to COLD (2) wall supply (Marked with a Blue Stripe). Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 20" (508mm) long from faucet base.


**Note:** If additional supply length is required, installer must purchase additional parts separately.

**Important:** If SUPPLY HOSES (1, 2) are to long, loop as illustrated to avoid kinking.

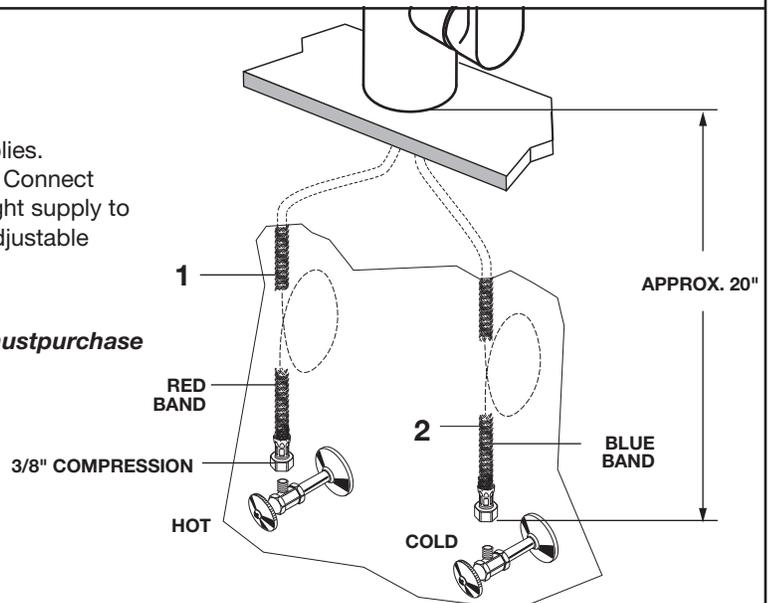


### 3 CONNECT SPRAY HOSE & INSTALL WEIGHTS

- Push the SPRAY HOSE END (1) into the HOSE COUPLING NUT (2). Tighten COUPLING NUT.
- With SPRAY (3) seated in SPOUT (4), install WEIGHT (5) onto HOSE (6) 18" (457mm) from the underside of the sink deck and secure with SCREW (7).

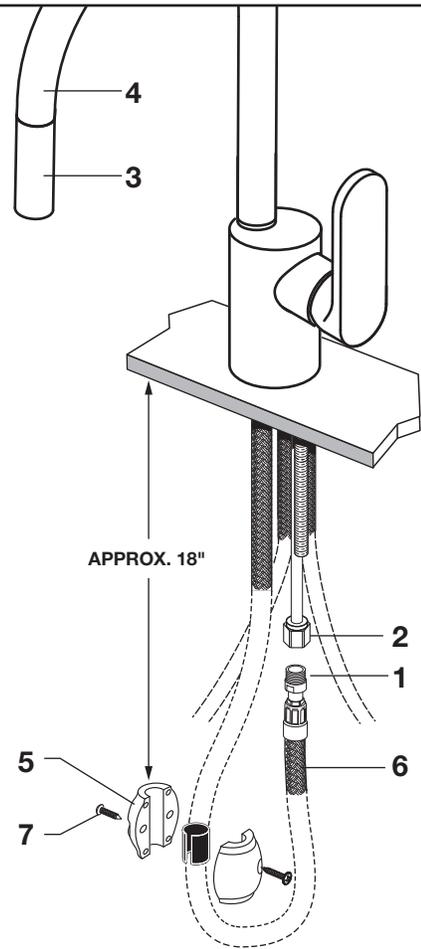


### 4 CHECK CONNECTIONS FOR LEAKS

- Move HANDLE (1) into "off" position.
- Turn on water supplies and check connections for leaks. ➡
- Operate HANDLE and check for leaks. ➡
- Tighten coupling nuts if needed.

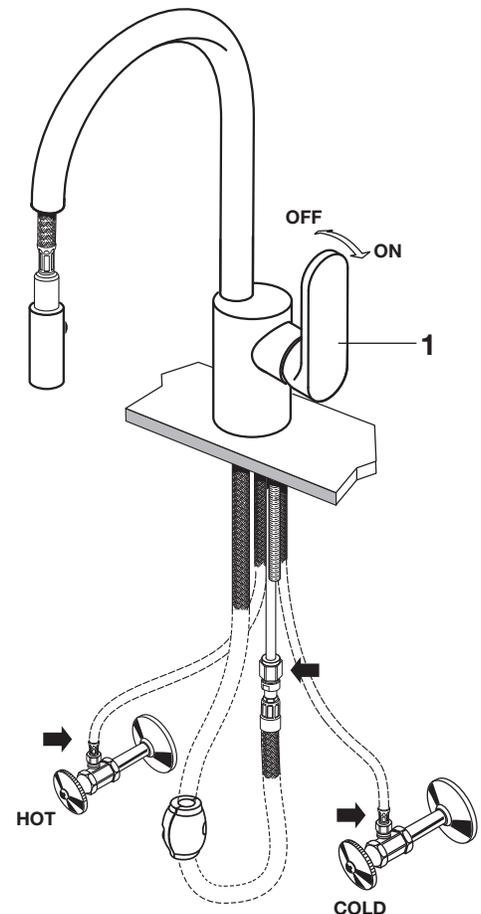


## 5 TEST INSTALLED FAUCET

- Move HANDLE (1) into “off” position.
- Turn on water supplies.
- With HANDLE (1) in “off” position, unthread AERATOR (2) from SPRAY (3) using KEY (4) supplied with faucet.
- Operate handle back to front, in COLD and HOT positions, to flush water lines thoroughly.
- Replace AERATOR (2).

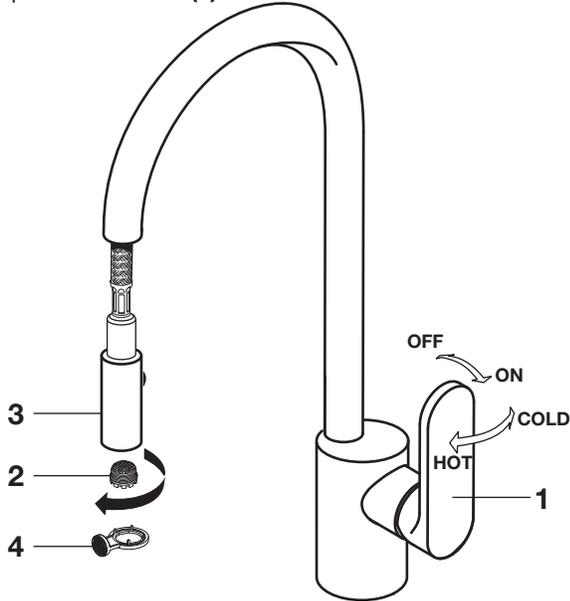

### SPRAY OPERATION


- With FAUCET on, pull down SPRAY (3). Check for leaks. Make sure SPRAY (3) fully retracts and is seated in the SPOUT HOLDER (5).
- Slide BUTTON (6) down for spray mode. Do not need to hold button down. Spray function will remain active until user slides BUTTON (6) up for aerated flow mode, or until water is shut off and turned back on again.

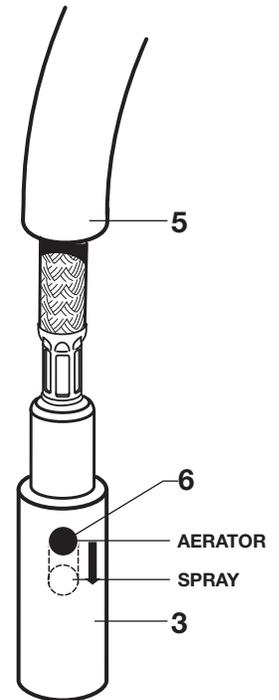

## 6 SERVICE

**Clogged CARTRIDGE outlets or inlets may cause reduced flow.** To clean, first turn off water supply then:

- Pull out INDEX BUTTON (1). Loosen HANDLE SCREW (2) with 2.5mm Hex Wrench, then pull HANDLE (3) off.
- Unthread CARTRIDGE COVER (4) with CARTRIDGE RING NUT KEY (7) supplied with faucet.
- Remove CARTRIDGE (5). Clean inlets of CARTRIDGE (5) and MANIFOLD (6).
- Reassemble CARTRIDGE (5). Replace CARTRIDGE COVER (4) and HANDLE (3) assembly, check flow.
- AERATOR (8) may accumulate dirt causing distorted and reduced water flow. Remove AERATOR (8) with KEY (9) and rinse clean and replace.

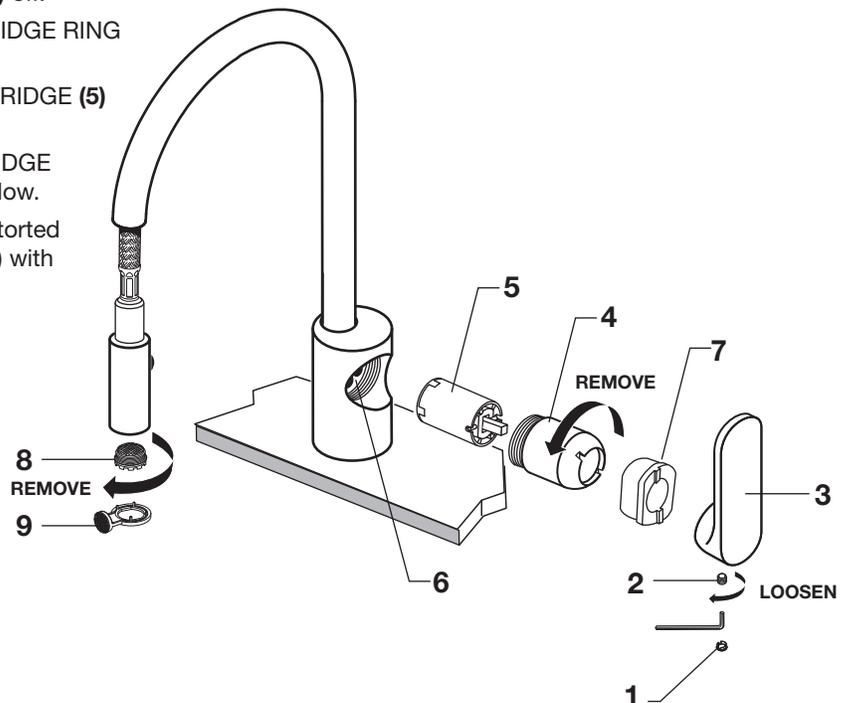



AMERICAN STANDARD

# Isle™ Single Control Pull-Down Kitchen Faucet

MODEL NUMBER

**D35409300**

Replace the "YYY" with appropriate finish code

POLISHED CHROME	100
ULTRA STEEL	355

