


INSTALL WITH CONFIDENCE • INSTALE CON CONFIANZA

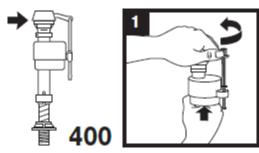




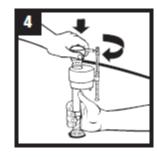


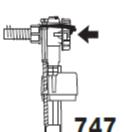



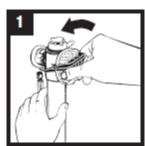

- 1. Turn off water supply. Flush toilet. Twist to remove cap. Remove seal.
- 2. Hold cup over opening, slowly turn on water to clear debris. Turn off water.

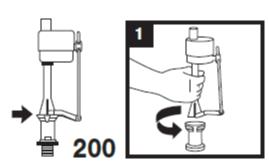

- 3. Gently push nipple onto stem in cap. DO NOT BEND stem.
- 4. Twist cap back into place. Turn on water.

NOTE: Replace fill valve if a) older than 5 years, b) do not know age, c) if in-tank bowl cleaners have been used. Use of such cleaners will: 1) RESULT IN DAMAGE to tank parts, 2) MAY CAUSE FLOODING and PROPERTY DAMAGE, 3) VOID FLUIDMASTER WARRANTY. Use only genuine

Fluidmaster replacement parts. Use of non-Fluidmaster parts will void the warranty on the Fluidmaster Valve.