# Keefe<sup>™</sup> Handle Trim Kits for Straight Wall Valves

Model D35104.700

Thank you for selecting DXV by American Standard. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.




## **RECOMMENDED TOOLS AND MATERIALS**

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing, supply stores. It is essential that the tools and materials be on hand before work is begun.







Plumbers' Putty or Caulking



Ш

s n

Ш

 $\alpha$ 


м О

ш

Regular Screwdriver

#### **ROUGHING-IN DIMENSIONS:**

• For reference

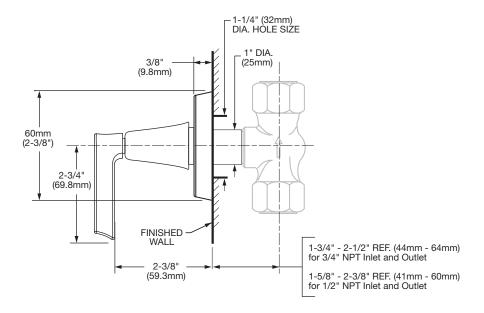

# In the United States:

DXV by American Standard One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

### In Canada:

DXV by American Standard 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada


Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca


### In Mexico:

DXV by American Standard Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx

- Install BARREL SLEEVE WASHER (7) onto VALVE STEM (2) as shown.
- Place BARREL SLEEVE (1) over VALVE STEM (2) and BARREL SLEEVE WASHER (7). Thread tight onto VALVE (3).
- Slide ESCUTCHEON (4) onto BARREL SLEEVE (1) flush against finished wall to cover wall opening. NOTE: Grease O-Ring if necessary.
- Align HANDLES as shown or as desired and install HANDLE ASSEMBLY (5) onto VALVE STEM (2).

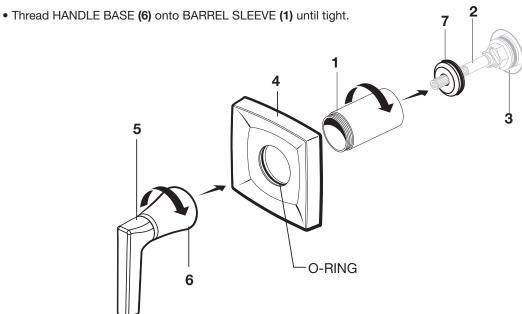

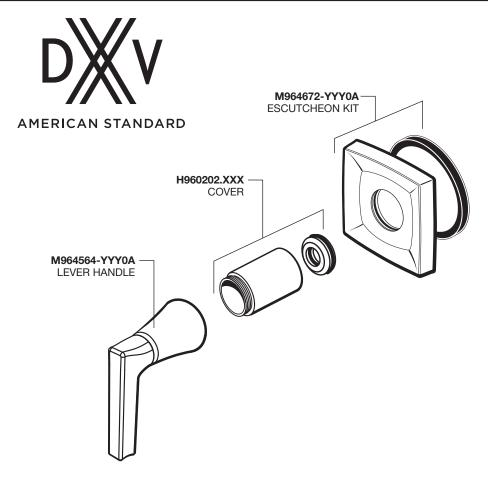

# Keefe<sup>™</sup> **Handle Trim Kits** for Straight Wall Valves

**MODEL NUMBER** 

D35104.700

Replace the "XXX" or "YYY" with appropriate finish code

POLISHED CHROME	100
BRUSHED NICKEL	144