

INSTALLATION INSTRUCTIONS

Oak Hill™ Mirror

Models **D19005000.620**
D19005000.238



AMERICAN STANDARD

Thank you for selecting DXV by American Standard. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.) Also be sure your installation conforms to local codes.

▲ CAUTION: PRODUCT IS FRAGILE. TO AVOID BREAKAGE AND POSSIBLE INJURY HANDLE WITH CARE!
NOTE: Pictures may not exactly define contour of mirror and components.

RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.




Level




Hammer



Tape Measure



Phillips Screwdriver




Regular Screwdriver




Drill

ROUGHING-IN DIMENSIONS:


- For reference

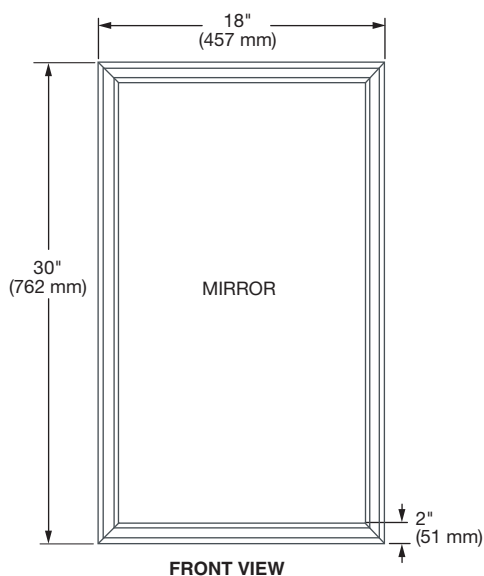

FRONT VIEW

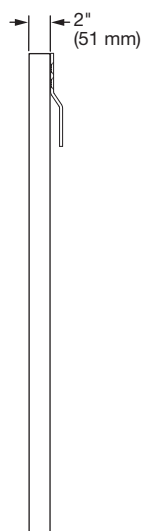

SIDE VIEW

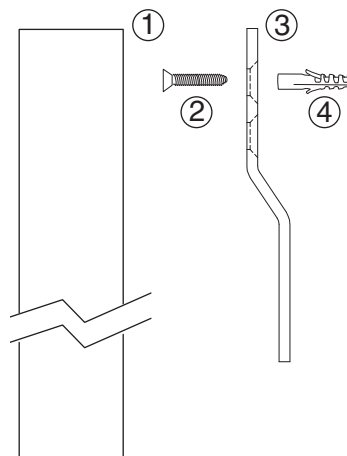

ITEM	DESCRIPTION
1	Mirror
2	6 x 1-1/2 Screw
3	Wall Bracket
4	Wall Anchor

In the United States:

DXV by American Standard
One Centennial Avenue
Piscataway, New Jersey 08855
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734
www.DXV.com

In Canada:

DXV by American Standard
5900 Avebury Road
Mississauga, Ontario
L5R 3M3
Canada

Toll Free: 1-800-387-0369
Local: 905-306-1093
Fax: 1-800-395-1498
www.DXV.ca

In Mexico:

DXV by American Standard
Via Morelos 330
Col. Santa Clara Coatitla
Ecatepec, Estado de México 55540


Toll Free: 01-800-8391200
www.DXV.mx

1

Note: The mirror must be hung on a wall. It is not designed to rest on the floor or on any type of furniture.

- Identify where the mirror is to be hung on the wall.
- Using a pencil mark the center of the top of the mirror as shown in **Figure 1**.


Figure 1

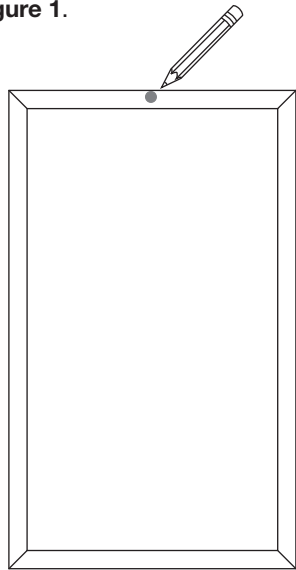

2

- Using a level, draw a 6" horizontal line 3-3/4" down from the point marked in Step 1 as shown in **Figure 2**.

Figure 2

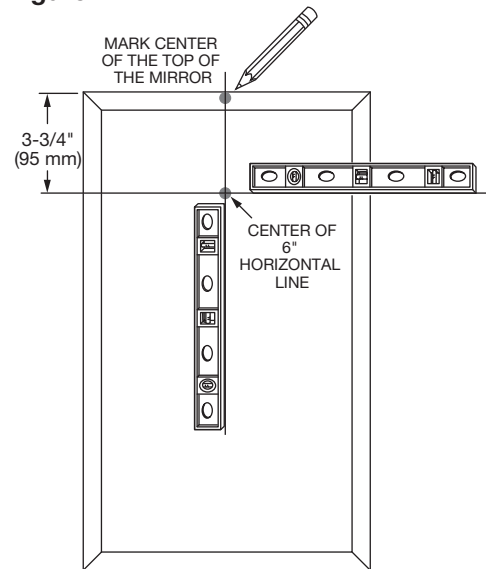


3

- Place the wall bracket on the horizontal line with the hole side down and flush with the wall. Be sure that the center hole is aligned with the center of the horizontal line as shown in **Figure 3**.
- Trace the hole locations on the wall as shown.
- Remove the bracket and drill 1/8" holes in the marked locations if going into wood. Drill a 1/4" if attaching to dry wall or plaster.

Note: Wall anchors must be used if hanging the mirror on dry wall, plaster, or tile.


Figure 3

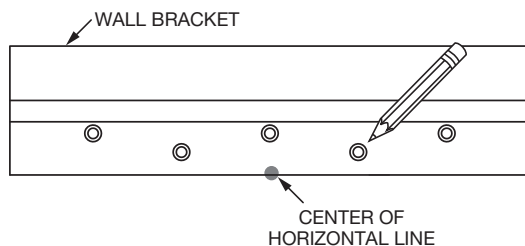

4

- Install the wall anchors if they are required.
- Attach the bracket to the wall using the screws provided.
- Be sure to confirm that the bracket is level prior to completely tightening the screws. Adjust as necessary.

Figure 4

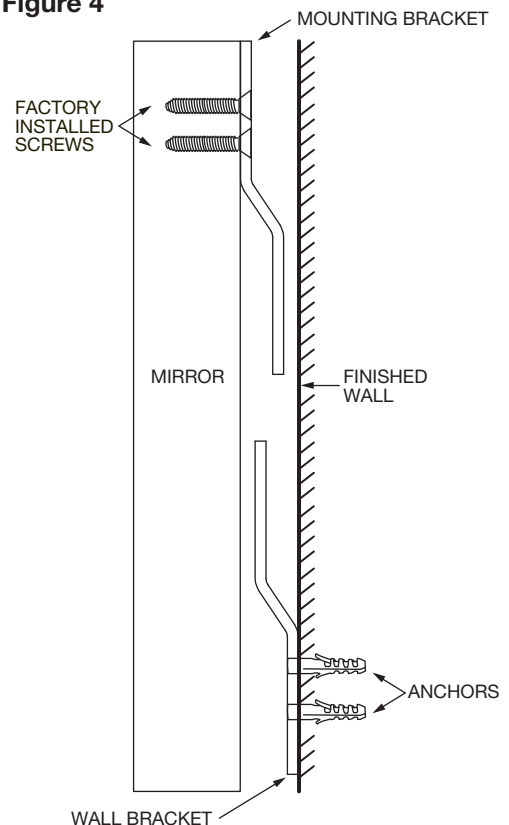

5

- Align the bracket on the mirror with the bracket on the wall (as shown in **Figure 4**) and gently slide the mirror until the mirror bracket rests firmly on the wall bracket .