Aspen Technical Specification Robe Hook


Stock Numbers:

Dimensions:

- 5802CH Robe Hook Polished Chrome Finish, Concealed Screw Mounting.
- 5802W Robe Hook White Finish, Concealed Screw Mounting.

Materials:

Robe Hook is die cast from highest quality zinc alloy (zamac). Castings are triple plated with a polished chrome or a powder coated white finish.

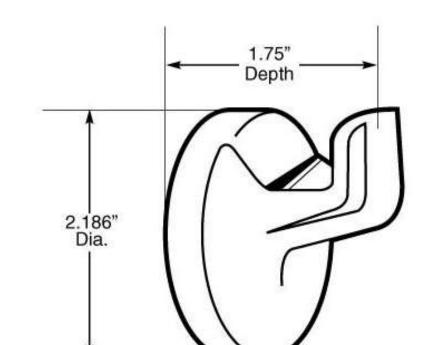

Installation Instructions:

- 1. Position the mounting plate on the wall at desired location with "UP" facing you.
- 2. One at a time, place each anchor screw through the mounting plate, centered in each large hole. Using a Phillips screwdriver, turn the anchor screw while applying pressure. Screw will self drill and tap into dry wall. Do not over tighten.
- 3. Place as sembly over the mounting post, setscrew facing down.
- 4. Tighten setscrew.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

By Creative Specialties

Robe Hook

5802

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 • FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 WWW.MOEN.COM ©Copyright Creative Specialties International Literature #BA0965

