

# ARCH<sup>TM</sup> HI-FLOW PULL-OUT KITCHEN FAUCET

**RECOMMENDED TOOLS** 

#### Installation Instructions 4101.350 4101.350F15 4101.351

4101.351 4101.350

Certified to comply with ANSI A112.18.1M

M968584 Rev. 1.6

Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

## Adjustable Wrench Regular Screwdriver


Phillips Screwdriver



INSTALL FAUCET WITH DECK ESCUTCHEON (4101.351)

CAUTION Turn off water at main supply.


- Installation with DECK ESCUTCHEON: Apply a light bead of plumbers putty to underside of ESCUTCHEON (1) if mounting surface is uneven. Place ESCUTCHEON (1) onto sink or mounting surface with large opening to the right as shown. Insert supply HOSES (2) and SHANK (3) through ESCUTCHEON (1) and mounting surface. Make sure slot in fitting base aligns with tab on ESCUTCHEON (1). Figure 1.
- Assemble RUBBER WASHER (4), BRASS WASHER (5), and threaded LOCKNUT (6) onto SHANK (3) from underside of sink or mounting surface. Hand tighten LOCKNUT (6) and check that rotation of HANDLE (7) from HOT to COLD is centered.
- Use a screwdriver to tighten SCREWS (8) on LOCKNUT (6). Work your way around LOCKNUT (6), tightening the SCREWS (8) slightly each time until all are snug to ensure even pressure.
- Install SPOUT ASSEMBLY: Insert HOSE (9) and SHANK (10) through ESCUTCHEON (1) and mounting surface. Make sure slot in spout base aligns with tab on ESCUTCHEON (1). Figure 2.
- Assemble RUBBER WASHER (4a), BRASS WASHER (5a), and threaded LOCKNUT (6a) onto SHANK (10) from underside of sink or mounting surface. Hand tighten LOCKNUT (6a). Use a screwdriver to tighten SCREWS (8a) on LOCKNUT (6a) the same as fitting installation above.

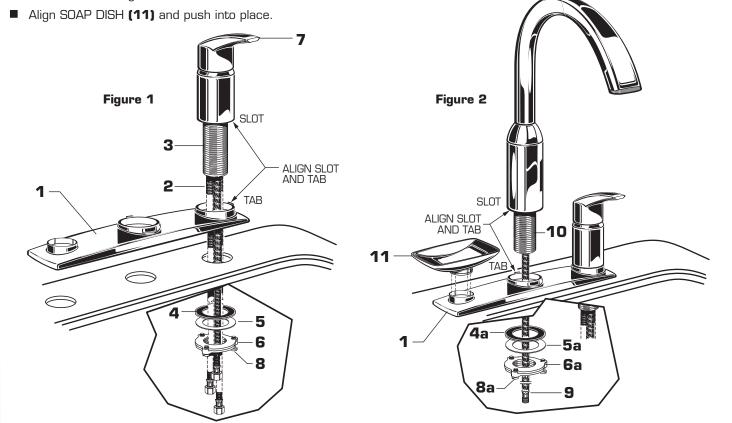

### 1a INSTALL FAUCET WITHOUT ESCUTCHEON PLATE (4101.351 with soap dish) (4101.350 less soap dish)


- Insert SEAL WASHER (1) into ESCUTCHEON (2). Place ESCUTCHEON (2) onto sink or mounting surface. Insert supply HOSES (3) and SHANK (4) through ESCUTCHEON (2) and mounting surface. *Make sure slot in fitting base aligns with tab on* ESCUTCHEON (2). Figure 1.
- Assemble RUBBER WASHER (5), BRASS WASHER (6) and threaded LOCKNUT (7) onto SHANK (4) from underside of sink or mounting surface. Hand tighten LOCKNUT (7) and check that rotation of HANDLE (8) from HOT to COLD is centered.
- Use a screwdriver to tighten SCREWS (9) on LOCKNUT (7). Work your way around LOCKNUT (7), tightening the SCREWS (9) slightly each time until all are snug to ensure even pressure.
- Install SPOUT ASSEMBLY: Insert SEAL WASHER (1a) into ESCUTCHEON (2a). Insert HOSE (10) and SHANK (11) through ESCUTCHEON (2a) and mounting surface. Make sure slot in spout base aligns with tab on ESCUTCHEON (2a). Figure 2.
- Assemble RUBBER WASHER (5a), BRASS WASHER (6a), and threaded LOCKNUT (7a) onto SHANK (11) from underside of sink or mounting surface. Hand tighten LOCKNUT (7a). Use a screwdriver to tighten SCREWS (9a) on LOCKNUT (7a) the same as fitting installation above.

(4101.351 with soap dish) Push SOAP DISH (11) into SOAP DISH SHANK (12). Insert SOAP DISH ASSEMBLY into mount hole. From underside of counter assembly LOCKNUT (13) onto SOAP DISH SHANK (12).
Align SOAP DISH (11) and tighten LOCKNUT (13).

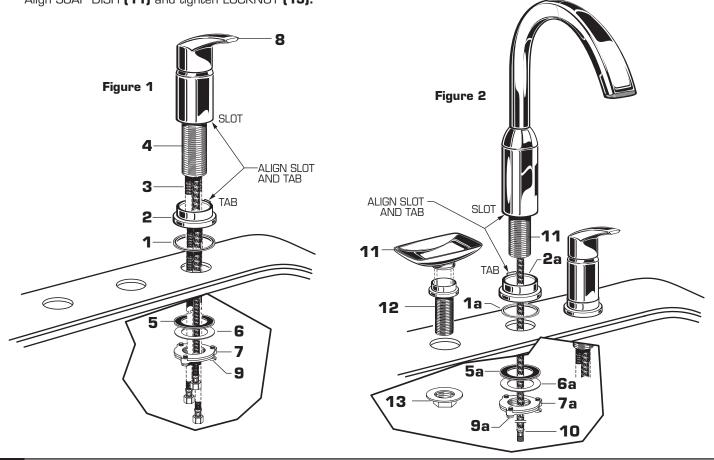

#### MAKE WATER SUPPLY CONNECTIONS


- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" compression. Connect left supply (Marked with a Red Stripe) to Hot and right supply (Marked with Blue Stripe) to Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 21" long from faucet base.
- Note: If additional supply length is required, installer must purchase those parts separately.
- Important: If SUPPLY HOSES (1, 2) are too long, loop as illustrated to avoid kinking.

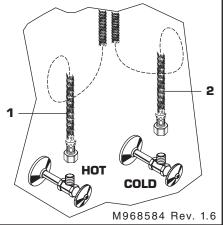

#### **CONNECT SPRAY HOSE AND INSTALL WEIGHTS**


With PULL-OUT SPRAY (1) seated in SPOUT (2), install WEIGHT (3) onto HOSE (4) using SCREW (5). Locate the WEIGHTS (3) two feet (2') from the underside of the sink deck. Tighten SCREW (5) firmly.


Make sure SEAL WASHER (7) is installed in COUPLING NUT (6). Connect threaded end of HOSE (4) to SPRAY HOSE COUPLING NUT (6) from fitting. Use wrench to tighten.

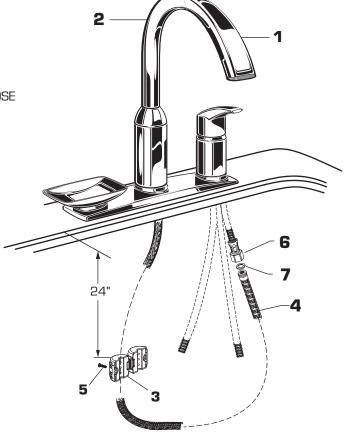


#### **CHECK CONNECTIONS FOR LEAKS.**

■ Move HANDLE (1) down into "off" position.

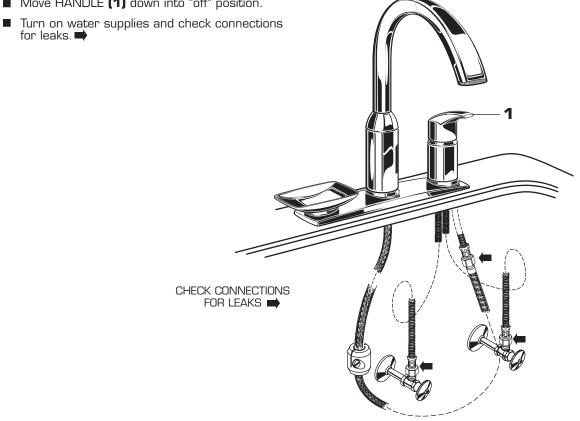

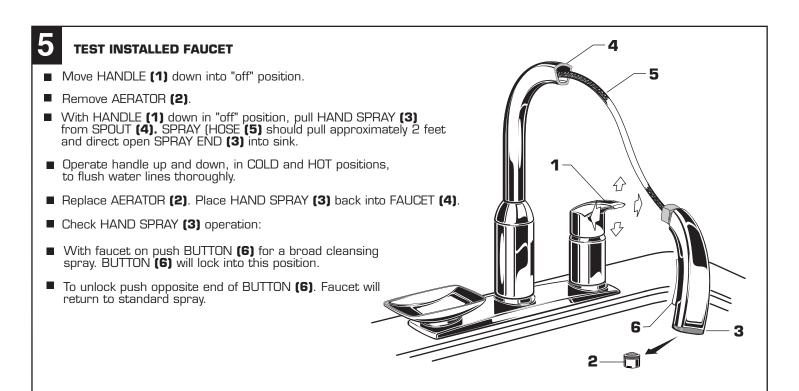

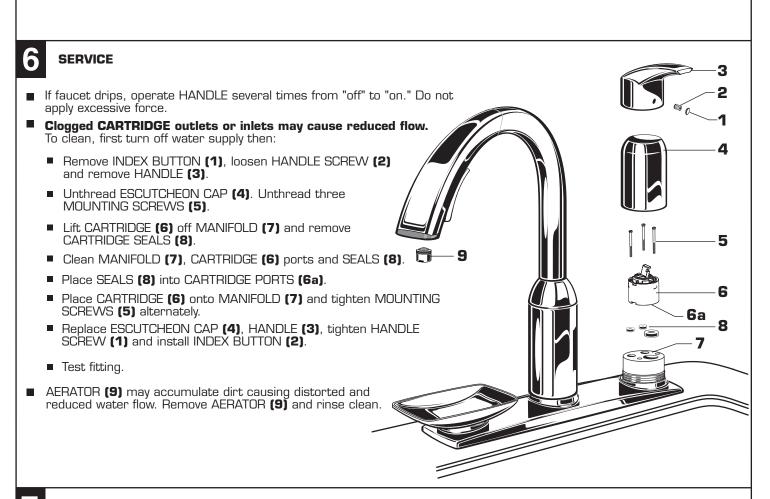

#### CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A
CLOTH WITH A COARSE SURFACE.

