


2 MAKE WATER SUPPLY AND WASTE CONNECTIONS

- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" compression. Connect right SUPPLY (2) to Hot (Marked with a Red Band) and left supply to COLD (1) wall supply.
- Faucet supplies are 20" long from faucet base.

Note: If additional supply length is required, installer must purchase additional parts separately.


Important: If SUPPLY HOSES (1, 2) are to long, loop as illustrated to avoid kinking.

• Connect 1-1/4" O.D. tail piece on POP-UP DRAIN to waste outlet.

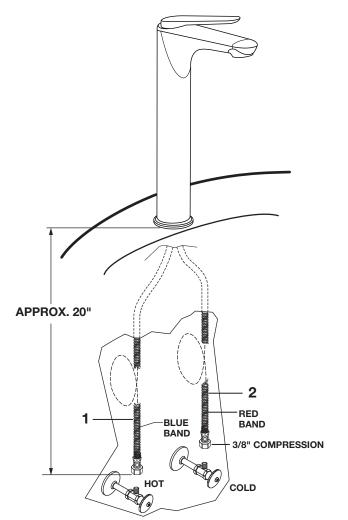

3 DRAIN ASSEMBLY (6542.140/.170)

- Apply a bead of PUTTY around underside of DRAIN FLANGE (1) flange. Insert DRAIN PLUG (2) into SINK drain hole.
- Hold DRAIN PLUG (2) to prevent turning and assemble GASKET (3), WASHER (4), and LOCKNUT (5) from underneath sink.
- Apply sealant to threaded end of TAILPIECE and thread into lower end of DRAIN PLUG. Connect other end to trap.

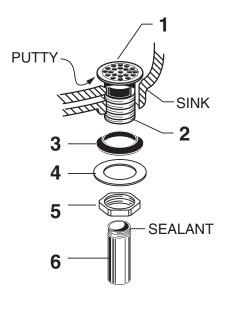

4 TEST INSTALLED FITTING	
 With HANDLE (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks. Remove AERATOR (3). Operate HANDLE (1) to flush water lines thoroughly. Replace AERATOR (3). 	TOFF COLD HOT
 5 SERVICE CAUTION Turn off hot and cold water supplies before beginning. To remove or replace cartridge: Turn valve to OFF position. Pull out PLUG BUTTON (1) and remove HANDLE SCREW (2). 	WASTE OUTLET 2 "P" TRAP
 Pull off HANDLE ASSEMBLY (3). Unthread CARTRIDGE NUT (5) using a 7/8" socket (deep socket) and remove. Pull out CARTRIDGE (6). Inspect CARTRIDGE (6) and O-RINGS (7) for debris and 	4
 clean if necessary. Clean MANIFOLD (8) and rinse clean. Reinstall CARTRIDGE (6) and O-RINGS (7) onto MANIFOLD (8). 	
 Reinstall CARTRIDGE NUT (5) and CAP (4) (orientation of the cap is very important). When reinstalling the HANDLE (3) push the lower gear back (as shown in the figure) then install HANDLE (3) in pushed down position (make sure the seal alligns with the body). Push SEAL (4) down, ensuring that it is completely pushed into the spout body. Reinstall HANDLE SCREW (2) and PLUG BUTTON (1). 	10 Lower Gear
6 CARE INSTRUCTIONS: DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WAT DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, CLOTH WITH A COARSE SURFACE.	

