Voss™ Technical Specification Grab Bar YG5112, YG5118, YG5124

Stock Numbers:

- □ YG5112CH 12" Grab Bar Chrome Finish
- □ YG5118CH 18" Grab Bar Chrome Finish
- □ YG5124CH 24" Grab Bar Chrome Finish
- YG5112BN 12" Grab Bar
 Brushed Nickel Finish
- YG5118BN 18" Grab Bar
 Brushed Nickel Finish
- □ YG5124BN 24" Grab Bar Brushed Nickel Finish
- YG5112ORB 12" Grab Bar
 Oil Rubbed Bronze
- YG5118ORB 18" Grab Bar
 Oil Rubbed Bronze
- YG5124ORB 24" Grab Bar
 Oil Rubbed Bronze
- YG5112BG 12" Grab Bar Brushed Gold
- □ YG5118BG 18" Grab Bar Brushed Gold
- YG5124BG 24" Grab Bar Brushed Gold
- YG5112NL 12" Grab Bar Nickel Finish
- YG5118NL 18" Grab Bar Nickel Finish
- YG5124NL 24" Grab Bar Nickel Finish


Materials:

Grab Bar posts and bars are constructed of stainless steel.

Compliance:

- ADA, ANSI, ASTM, CSA
- · Tested to 500lbs. pull

Dimensions:

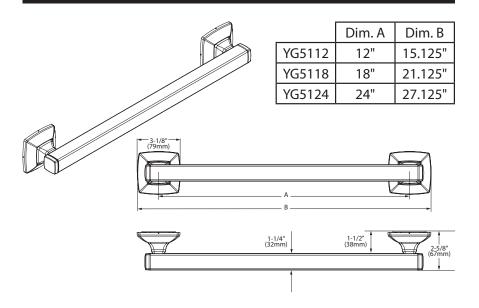

Installation Instructions:

- 1. Please note that screws MUST be mounted into a wood stud for secure installation.
- Decide whether you would like to position your grab bar horizontally, vertically or at an angle, remembering that BOTH ends of the grab bar MUST be positioned over a wood stud (unless using secure mount anchors).
- For easier installation and mounting remove 3 set screws from each flange and remove bar from SecureMount™ Flange.
- 4. Remove cover and re-assemble flange to bar by tightening 3 set screws.
- Place grab bar and mark three mounting locations on each of the two grab bar flanges with a pencil.
- 6. Drill 1/8" diameter pilot holes at each screw location. Make sure to drill into the stud.
- Install 3 screws and washers each SecureMount[™] flange and tighten until secure. If desired, apply silicone caulk to the back of the SecureMount[™] plate to guard against water penetration.
- After screws are installed each side, dis-assemble bar from SecureMount™ flange by removing set screws.
- Re-install covers.
- Place bar over SecureMount[™] flanges and tighten all set screws.
- Snap on covers.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	_Grab Bar
By Moen Incorporated	

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

© 2018 Moen Incorporated. Moen is a registered trademark and Voss is a trademark of Moen Incorporated. All rights reserved.

